

FDD

Frilo.Document.Designer

The Frilo.Document.Designer - FDD is a standalone program for managing, integrating and editing PDF-based documents. The program can not only be used to document Frilo projects, but also as a universal tool for creating a PDF document from various sources.

Function overview

- Organize and structure the documents of a structural project
- Include the output/results of FRILO programs
- Include external documents and applications (PDF, graphics, etc.)

Features

- Insert chapters / documents
- Layout with own templates and formatting

- Different page headers/footers definable
- Automatic page numbering
- Fixable page numbers
- Show and hide sections for reduced document variants
- applications such as
 - Word / Excel,
 - Open Office etc.
 can be started with a double-click, contents can be edited
- Automatic table of contents
- Title page, introductory remarks and additional comments optional
- Direct start of toolboxmodules
- Sync with tablets through the StaticsToGo app

Die Frilo-App StaticsToGo

This Frilo app for tablets synchronizes the statics documents between PC and tablet. Whether at the construction site or at a meeting - the current project documentation is always included. Notes can be inserted along the way for later processing.

STG for Android and iPad

The app is available free of charge for Android (Google Play Store) and for iPad (iTunes).



FRILO Statics To Go
FRILO Software GmbH Büro
USK ab 0 Jahren

Zur Wunschliste hinzufügen Installieren

The screenshot shows the software interface with several callouts:

- Send static document as mail:** Points to the 'Send Email' icon in the top toolbar.
- Move chapter by drag & drop:** Points to the 'Contents' table on the left side of the interface.
- Self-defined title page:** Points to the '1. Titel' section of the document preview.
- Automatic table of contents:** Points to the 'Contents' table in the bottom right corner of the preview.
- The individual items in a chapter:** Points to the list of items under the '1. Upper floor' chapter.
- Active: Show / hide individual parts:** Points to the 'Active' checkbox in the 'Properties' panel at the bottom left.