

Foundation FD+ / FDB+

Contents

Application options	2
Additional option FD-PRO	3
Additional option FD-BEW	3
Basis of calculation	4
Reinforced concrete	4
Shear resistance verification	6
Basis of calculation for verifications in foundation engineering	8
With additional option FD-PRO	12
Data entry – Basic parameters	14
System	15
Foundation	15
Column	15
Sleeve	16
Soil	18
Ground water	22
Surface	22
Loads	23
Load Cases	24
Single Loads	26
Line Loads	26
Block Loads	27
Distributed Loads	27
Design / Verifications	28
Punching	29
Sector model	30
Reinforcement	32
Enhanced reinforcement dialog	33
Foundation engineering	39
Earth pressure (with additional option FD-PRO)	40
Parameter	41
Sleeve foundation	42
Calculation in accordance with "Beispiele zur Bemessung nach Eurocode 2", Volume 1, Chapter 12	42
Calculation in accordance with Leonhardt and Mönning	44
Block Foundation	47
Output	48
Explanatory notes on the output of the results (table)	49
Output of the reinforcement	49
Evaluation of the results	49
Output: Punching shear resistance verification	51

Basic Documentation – Overview

In addition to the individual program manuals, you will find basic explanations on the operation of the programs on our homepage www.frilo.com in the Campus-download-section.

Application options


The FD+ application allows you to verify squared and rectangular foundations cast with or without sleeve.

External loads can optionally apply centrally or with a uniaxial or biaxial eccentricity.

The software application calculates the soil pressure underneath the four corner points and the position of the zero-line in case of a gapping joint.

The required flexural reinforcement is calculated for the foundation and the punching shear resistance verification is performed.

You can optionally calculate the required connection reinforcement (Option "Connection Reinforcement" under ▶ Output).

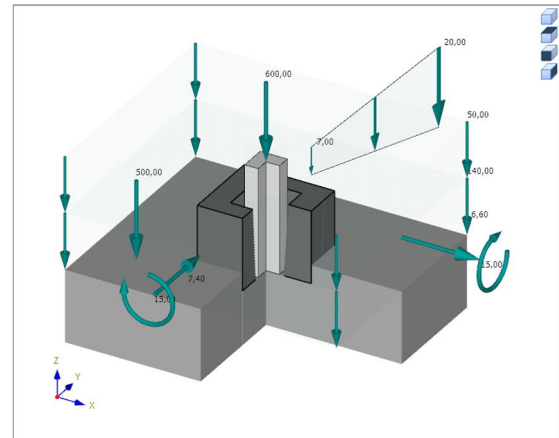

The system consists of the foundation slab and an optional


- column
- Sleeve

with optional eccentricity

The flexural design is performed at the centre of the column (axis) – the graph of the moment will be rounded. Optional it is performed at the column edge.

You can include the following load types in the calculation:


- Single vertical load V at the column location
- Horizontal loads H_x und H_y .
The horizontal loads are acting (see graphic below)
 - at the top edge of footing or
 - if a column was defined, at the top edge of the column and
 - if a Sleeve was defined, at the top of the Sleeve.
 horizontal loads are generating a moment (effects in the sole)
 - as an option the horizontal loads can act directly at the sole without generating a moment.
- Outer moments M_x and M_y
- Earth surcharge load and additional uniformly distributed load applying to the foundation surface without column and additional vertical single loads applying at freely selectable points.

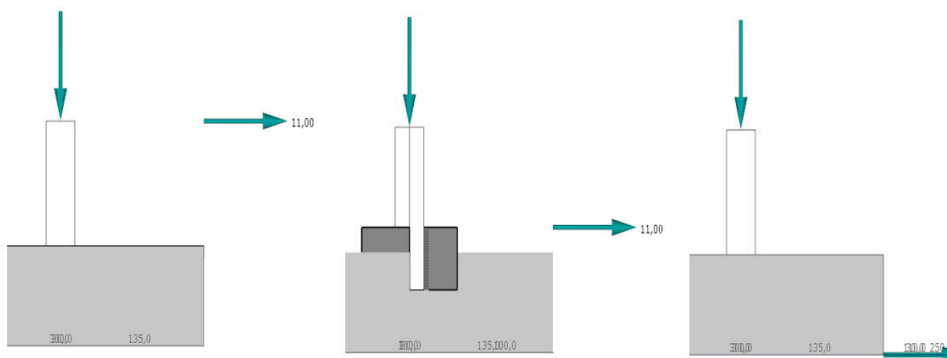

Connected programs

Interfaces to other FRILO design programs:
see fig. on the right

The data can be passed on to other programmes. If the foundation is more of a slab, it is recommended to consider an export to PLT. A forwarding to B6+ enables a design with further materials. Forwarding to BEB+ can be considered if a strip foundation can no longer be considered a rigid body. Different foundations can be passed on to a settlement calculation at the same time. The global position of the foundation is important. The settlement calculated there then also contains settlements from neighbouring foundations and, if applicable, neighbouring buildings (e.g. with data from the GEO building model).

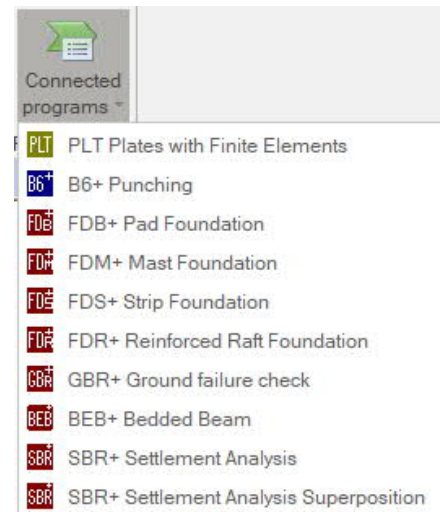

Additional option FD-PRO

With the additional option FD-PRO, the foundation programmes FD+/FDB+/FDS+ and GBR+ can be extended to include

- an earth pressure approach
- an inclined foundation base
- a seismic ground failure verification
- a ground failure - punching shear verification
- a bearing capacity calculation of the foundation soil with a table of design values of the base pressure resistance.
- a graphical output of the internal forces along the main axes

for FD+/FDB+/GBR+ the foundation type

- - Circular foundation

See [calculation basis for foundation engineering](#).

See also ▶ [Video](#)

[Free 30-day demo](#)


The additional option can also be tested for 30 days without a licence. If a function is selected from this option and no licence is available, the programme asks whether the 30-day test period should begin.

Additional option FD-BEW

The additional option FD-BEW can be used to create a [reinforcement graphic](#) that can be output either in the document or as an extra sheet with a title block in the Document Designer.

The individual elements (texts, graphics) can be moved with the mouse using drag & drop.

A round steel list and other construction details can optionally be added to the plan using the context menu (right mouse button).

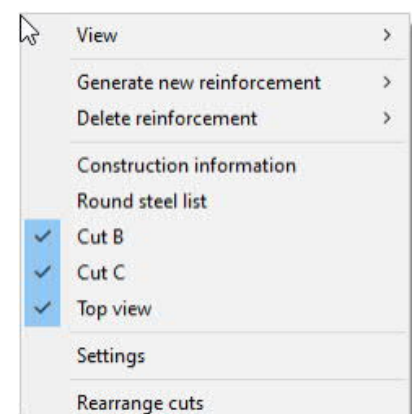

Basis of calculation

Reinforced concrete

Available standards / national annexes

- DIN EN 1992-1-1:2011/2012/2013/2015
- ÖNORM B 1992-1-1:2011/2018
- BS EN 1992-1-1:2009/2015
- NF EN 1992-1-1:2016
- PN EN 1992-1-1:2010
- EN 1992-1-1:2010/2014

- DIN EN 1997-1:2010
- ÖNORM B 1997-1:2010/2013
- BS EN 1997-1:2007/2014
- NF EN 1997-1:2018
- PN EN 1997-1:2011
- EN 1997-1:2009

Nationale Bemessungsnormen

- DIN 1054:2005/2010/2021
- DIN 4017:2006
- DIN 4019:2014
- ÖNORM B 4435-2:1999
- NF P 94-261:2013
- BS 8004:2005

still available:

- DIN 1045:1988 as well as DIN 1045-1 (2001 + 2008)
- ÖNORM B4700:2001
- DIN 1054:1976

The flexural design is performed in accordance with the kh- or kd-method.

The punching shear resistance is verified in accordance with the selected reinforced concrete standard. The constructive rules specified by the Booklets 631 and 600 issued by the German Committee for Reinforced Concrete DAfStb are optionally considered.

The decisive reduced shear force Q_{red} is calculated by reducing the existing column load by the reaction force of the soil pressure portion attributed to the base surface of the punching cone.

The shear resistance verification is performed if the foundation geometry produces a uniaxial supporting behaviour.

For sleeve foundations the following distinction is made:

- In combination with a rough/toothed sleeve surface, the punching cone can be assumed outgoing from the surface of the sleeve because the effect of the composite action allows such load distribution.

- In combination with a smooth sleeve surface, the column base is considered to be the upper boundary of the punching cone.
- If the total bottom face of the foundation is inside the punching cone assumed with an inclination angle of 45 degrees, the verification can be dispensed with.

The column moments and horizontal forces are decomposed into the equivalent force groups H_o and H_u . An inclined strut D results. The inner lever arm z depends on the roughness of the surfaces. The limiting cases "smooth sleeve surface, no bond" and "rough sleeve surface, full bond" are distinguished. The lever arm z is assumed to be approximately $6/10$ of the penetration depth t with no bond. With full bond, its value is multiplied with 1.4. If the bond is not ensured by appropriate measures, additional reinforcement should be installed to compensate the lower force component H_u .

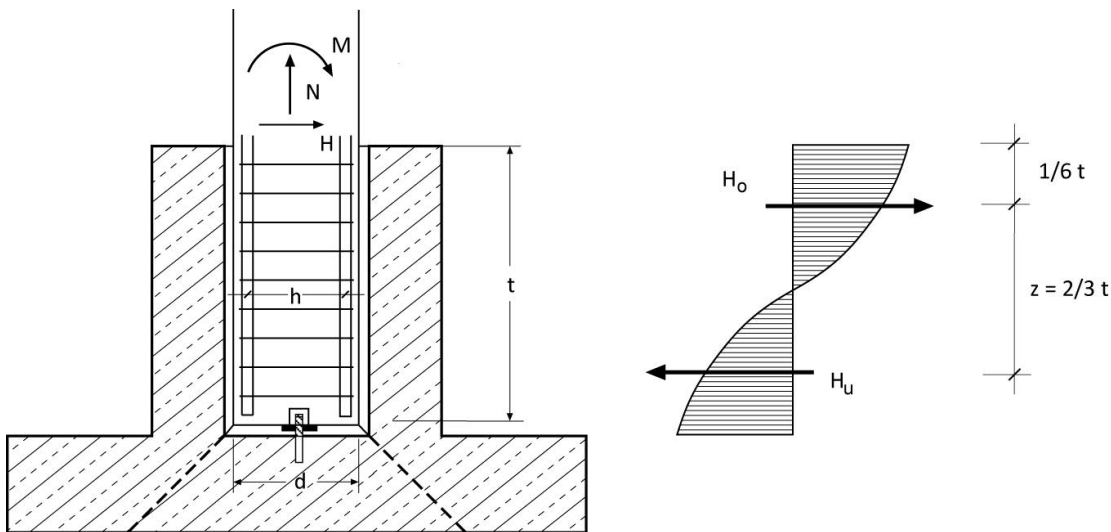


Illustration: Sleeve with smooth surface

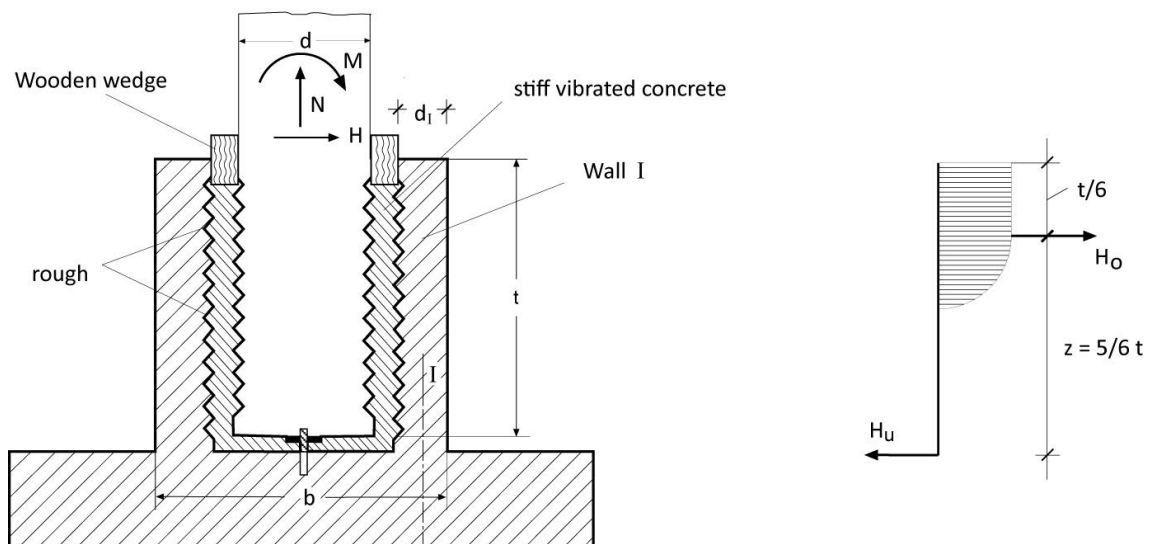


Illustration: Sleeve with rough surface

Shear resistance verification

By default, the program decides according to the defined geometry and the presence of a gaping joint under design loads whether a punching shear verification, a shear force verification or both are calculated.

Otherwise, you can define the scope of verification individually under [Design](#).

This can happen in the three cases described below.

Meaning of the variables:

d	Statically effective height of the foundation
h	Foundation height (in z-direction)
a_1, a_2	Distances of the column to the foundation edge on the left and right (in x-direction)
a_3, a_4	Distances of the column to the foundation edge at the front and rear (top and bottom in the illustration, in y-direction)
c_x	Column dimension in x-direction (width)
c_y	Column dimension in y-direction (length)


Case 1:

The distances of two opposite column or sleeve sides to the foundation edges are smaller than or equal to the statically effective height d . At the same time, the distance of one of the remaining sides to the foundation edge is greater than d (see illustration 1).

Illustration 1:

a_1 and $a_2 \leq d$

a_3 and/or $a_4 > d$

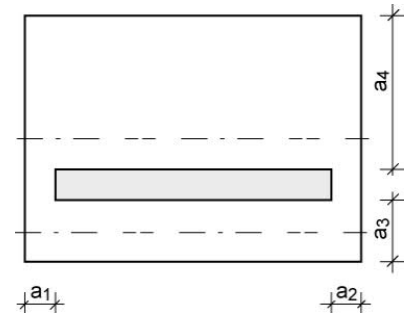

In this case, only shear resistance, not punching shear resistance, is verified.

If the pressure is unevenly distributed along the shear section, the shear resistance is verified in the area with high pressure (see illustration 1a).

Shear force resultant with variable pressure distribution along the shear section.

Examined area of the resulting shear force in the shear resistance verification section

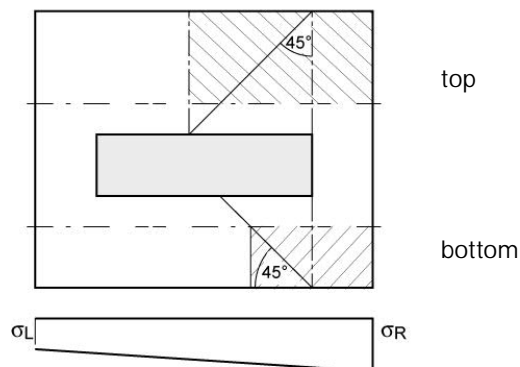


Illustration 1a

Case 2:

The dimensions of the sleeve or column are comparable to those of a wall.

$$a_1 > d \text{ and } a_2 > d \text{ and } c_x > a_1 + a_2 + c_y + c_y + L_s \text{ (} L_s \geq 1 \text{ m)}$$

According to Booklet 631 of the German Committee for Reinforced Concrete DAfStb, the punching shear resistance for walls on stiff foundations is verified on an equivalent system where a square column ($c_y \cdot c_y$) is positioned on a symmetrical rectangular foundation at the wall end.

The shear resistance is only verified if a wall is at least as long as the two equivalent systems at the wall ends plus an addition L_s (length of the shear section).

If $L_s < 1$ m, a minimum length of 1 m is taken into account (see ill. 2).

The shear resistance verification is performed in the central area of the wall between the two equivalent systems. In addition, the punching shear resistance is verified on an equivalent column with a side lengths ratio of 1:1.5.

If the foundation height $h \geq 1$ m, the foundation height h is set for the length of the shear section L_s .

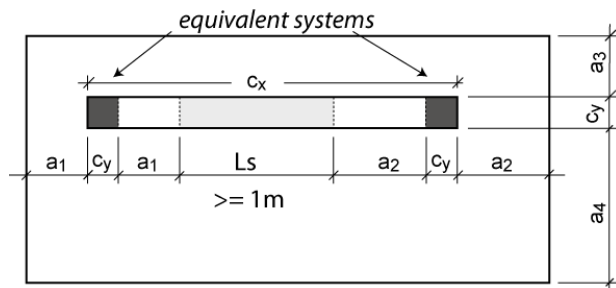


Illustration 2:

Case 3:

The distance of one side of the column or sleeve to the foundation edge is smaller than d and the distance of at least one other side of the column or sleeve to the foundation edge is greater than d , but the conditions of case 1 are not satisfied. At the same time, the length of the column or sleeve must at least be equal to $2d$ (see illustration 3).

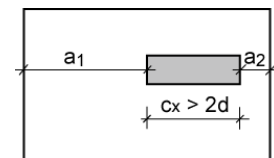


Illustration 3:

In this case, punching shear resistance is verified on an equivalent column with a side lengths ratio of 1:1.5.

The shear resistance is verified in the area of the wall.

If the pressure is unevenly distributed along the shear section in the area of the wall, shear resistance is verified in the area with high pressure (see illustration 1a).

If a wall is as long as or exceeds the minimum length defined in case 3 and is located at the edge, the software examines if the border or central area of the wall has higher shear reinforcement and performs a shear resistance verification in this area.

For the verification of punching shear resistance it is recommended to specify a total load factor for the punching shear load in the program.

In the standards based on the partial safety concept, the limit distance d specified in the cases above is defined as $1.5 \cdot d$.

The option "shear force as beam" in the [Design](#) menu allows you to verify shear force resistance on a beam instead of a plate.

Basis of calculation for verifications in foundation engineering

Standards

- DIN EN 1997-1
- ÖNORM EN 1997-1
- BS EN 1997-1
- NF EN 1997-1
- PN EN 1997-1
- DIN 1054:1976/2005/2021
- NF P94-261:2013
- BS 8004:2015

Position stability

When performing the verification of the position stability in accordance with Eurocodes, the stabilising and destabilising moments are determined on the four outer edges of the foundation. If the result load cases are used instead of the characteristic ones, no reduction factors are considered in the calculation of the stabilising and destabilising moments. In this case, only self-weight is multiplied with the partial safety factors that have a favourable or unfavourable effect.

The verification of the boundary stresses

Here, the permissible base pressure from the simplified check is compared with the design value of the boundary stress from the stress trapezoidal method. This is a check commonly used in the English-speaking world, which is intended to prevent excessively large settlements.

The limitation of the load eccentricity

The limitation of the load eccentricity takes place both in the ultimate limit state according to NF P94-261 9.5 and in the serviceability limit state according to NF P94-261 13.3. This is a common verification in the French-speaking area in different design situations.

Gaping joint

Under permanent loads, in the German-speaking area no gaping joint must occur and under the total load, gaping of the foundation joint is allowed only up to the centre of gravity. The limitation of the gaping joint for permanent and variable loads according to first and second order theory can be set user-defined. In combination with Eurocodes, the calculation of the gaping joint is based on representative instead of characteristic loads.

If design values are used instead of characteristic loads (Basic parameters ▶ Type of actions), the loads are reduced to the characteristic level with the help of reduction factors before considering the gaping joint. In this connection, it is important to define whether the individual load cases are the result of permanent loads exclusively or of both, permanent and variable loads. A gaping joint up to the centre of gravity is only permitted for the combination of permanent and variable loads. It is not permitted if only permanent loads apply.

Permissible bearing pressure

For a simplified verification in standard cases, the existing bearing pressure is compared to the permissible bearing pressure or a design value of the bearing pressure resistance. The latter can be determined automatically with the help of standardised tables for this type of verification. The permissible bearing pressure taken from the standard tables could be increased or reduced if matching boundary conditions, such as the required anchoring depth, ground water or the relation of the horizontal and vertical loads require this.

In combination with Eurocodes, the calculation of the equivalent area for the design value of the bearing pressure is based on representative instead of characteristic loads.

If design values are used instead of characteristic loads the loads are reduced to the characteristic level with the help reduction of factors before considering the equivalent area. The design value of the bearing pressure is obtained by dividing the design value of the vertical loads by the representative or characteristic equivalent area. As additional information, the software determines the inclination of the characteristic or representative bearing pressure resultant in order to check whether the inclination is suitable for a simplified verification.

Stability against sliding

If horizontal forces apply, the stability against sliding is verified. The stability against sliding is considered satisfactory if $T_d \leq R_{td}$.

T_d : Design value of the loading parallel to the bottom of the foundation.

T_d is calculated by the software by multiplying T_k with the partial safety factors for the decisive limit state. The software uses the partial safety factors for the permanent and quasi-permanent design situations. If you define loads applied by accidental actions or earthquakes, the accidental and seismic design situations are taken into account as well.

R_{td} : Design value of the sliding resistance.

R_{td} is calculated by dividing R_{tk} by the partial safety factor for the sliding resistance for the decisive limit state in accordance with the currently selected foundation standard.

Safety against ground/bearing resistance failure according to analytical methods

In combination with Eurocodes, the ground failure safety is calculated with characteristic or representative values. The design values of the ground failure resistance are determined by dividing the characteristic values by the partial safety coefficients. They are compared to the design values of the actions, which are multiplied by partial safety factors. Depending on the selected design standard, the characteristic or representative ground failure safety is calculated on the basis of ÖNORM B 4435-2, DIN 4017, BS 8004, NF P94-261 Annex F or EN 1997-1 Annex D.

The FD+, FDB+, FDS+ and FDR+ applications always calculate the ground failure safety as an isolated foundation. FDS+ and FDR+ calculate the ground failure safety as a strip foundation if the wall length corresponds to the foundation length.

In the GBR+ application, the "strip foundation" verification type is optionally available. When you select this type of verification, the shape coefficients and the load inclination coefficients 'ma' and 'mb' are set to 1.0. Instead of the calculated equivalent width in the longitudinal wall direction (y-direction), the foundation length (y-direction) is taken into account.

Safety against base failure according to semi-empirical methods

The determination of the base failure safety according to semi-empirical methods is common in France, for example. In this case, the base failure safety is calculated from pressure test data according to EN 1997-2 Annex D or NF P94-261 Annex E or from pressiometer test data according to EN 1997-2 Annex E or NF P94-261 Annex D.

The Settlements from strain integration or settlement equations

The settlements are calculated according to DIN 4019:2014, therefore characteristic loads should be taken into account. The user can decide whether only the static loads or also the variable loads should be applied and whether the variable loads should be multiplied combination coefficients.

See DIN 1054:2021 2.4.8 A (2.8a). The settlements are calculated in characteristic point K on the surface of the foundation – that is the point, in which the settlement calculated for rigid foundation matches with the calculated settlement with an assumption of equivalent uniformly distributed load. The settlements are determined for every defined soil layer. As a result, at the printout it is pointed out whether the settlement effective depth or rather limit depth t_s in the ground, from which additional stresses cause only negligibly small deformations in the soil, was achieved or not. The calculated module E^* , which is used as a value for the settlements analysis, can be either specified directly by the user or calculated automatically from the given stiffness value and predetermined correction coefficient. Some soil parameters are required for settlement

analysis, which include: geometrical model of the ground and also the groundwater model, as well as parameters of the soil layers, which can be usually found in the geotechnical reports according to DIN EN 1997-2 or DIN 4020. Further information is required about the structure and the ground. These include the dimensions and the level of the foundation, values of the loads applied to the foundation and, if applicable, also their development and changes in time, the distance of the foundation to foundations of adjacent buildings, the geometry and loads for the adjacent buildings foundations, as well as the terrain elevation. Frequently, only some part of changeable loads is relevant for settlement analysis. For the calculations of settlements, the significant settlement effective depth is verified by the program. It is located where the perpendicular additional stresses caused by the average loads effective for settlements are equal to 20% of the effective perpendicular output stresses of the ground. These criteria are verified at the deepest point of the last defined soil layer and there is an appropriate message about it in the printout.

It can happen, that highly compressible soil layers are present below the determined settlement effective depth, therefore the depths of the layers greater than the limit depth can be defined by the program. The settlements are calculated according to DIN 4019:2014 (3) for a rigid foundation in the characteristic point (see DIN 4019:2014, figure 3).

[The settlements from adjusted elasticity methods.](#)

Here, the settlements are calculated according to EN 1997-1 Annex F.

[Settlements from pressure test data](#)

Here, the settlements are calculated according to EN 1997-2 Annex D.

[The settlements from pressiometer test data](#)

Here the settlements are calculated according to EN 1997-2 Annex E.

At first, the program calculates the settlement s , which consists of the immediate settlement s_0 and the consolidation settlement s_1 .



$$S = S_0 + S_1$$

The consolidation settlement is considered at the end of the consolidation according to DIN 4019:2014 12.2 and is determined for the point in time $\tau = 1$ and set up in a table. Additionally, the increase of settlement in time until the estimated end of consolidation is graphically presented.

Then the creep settlement for a value of $\tau \geq 1$ given by the user is calculated and that results in the total settlement value S_{ges}

$$S_{ges} = S + S_2$$

Time-settlement curve to the estimated completion of consolidation in days and cm

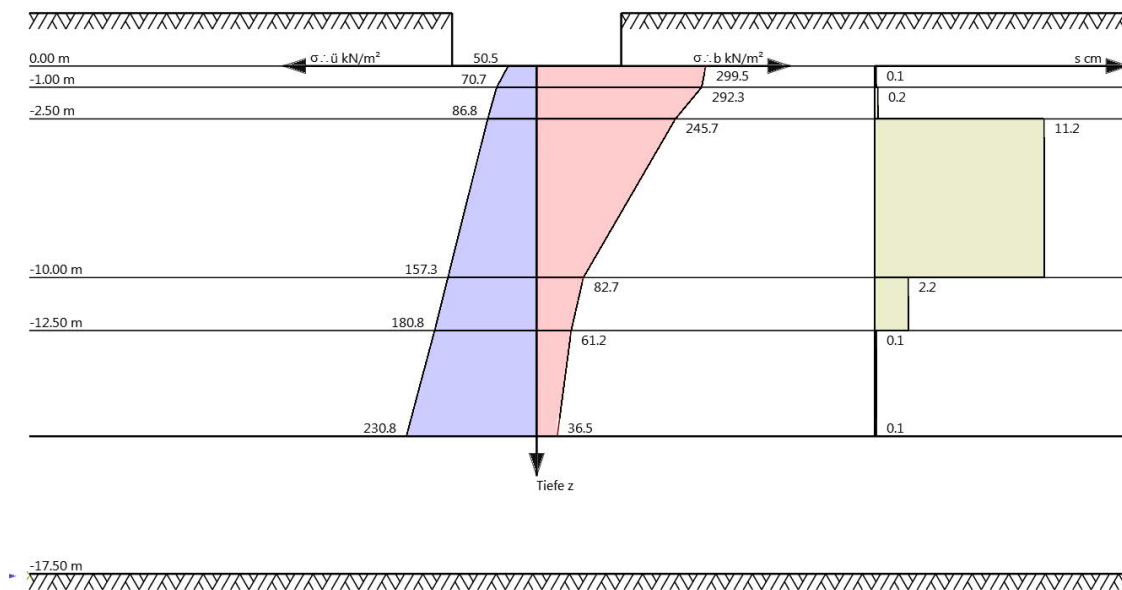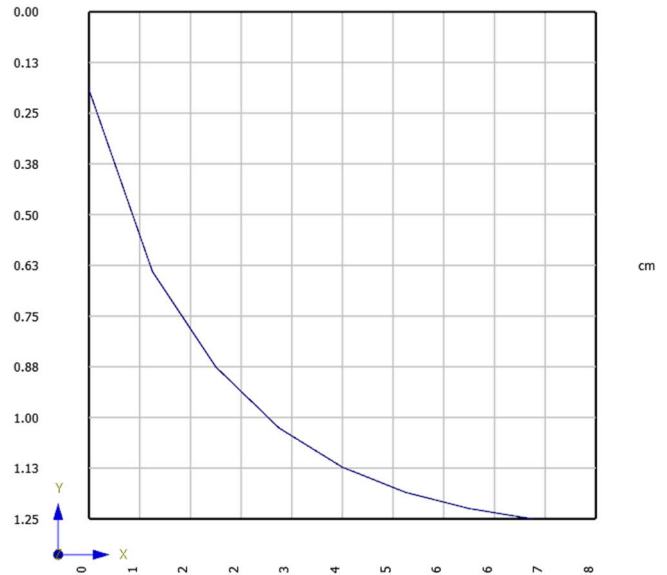

If eccentricities occur in the decisive superpositions or the significant load case for the settlement calculation, the additional settlement part ΔS is calculated. If there is a gaping joint, then the program reaches its applications limit for settlements calculations.

With additional option FD-PRO

The following functionalities require the additional option FD-PRO.
See also application options [FD-PRO](#).

Circular foundation (FD-PRO)

A circular foundation is also available. In this case, the internal forces are determined and designed separately in the x and y directions in the same way as for a rectangular foundation. For a different reinforcement distribution, where the design axes deviate from the reinforcement directions, the required reinforcement must be increased in accordance with the relevant technical literature.

Note: The reinforcement dialog for the circular foundation is currently (Release 2024-2) still in the test phase and has not yet been activated.

Base inclination (FD-PRO)

The inclination of the sole can be specified in degrees or as a height difference for one of the two axes. The geotechnical verifications are then carried out taking the inclination into account. The verification of sliding resistance extends to the failure in the horizontal shear plane at the lowest point of the foundation. The reinforced concrete design is carried out with the smallest foundation thickness. When determining the internal forces, the additional concrete wedge is taken into account as a self-weight - as is the additional buoyancy in the case of groundwater above the floor.

Earth pressure (FD-PRO)

The active earth pressure can be switched on. In addition, increased active earth pressure and earth pressure are possible. Compaction earth pressure can also be selected. Furthermore, the earth resistance can be taken into account. The earth pressure resistance can be specified as a different percentage for some verifications. Values recommended by the standard are preset. Which side of the foundation is subject to active earth pressure and which side is subject to passive earth pressure depends on the horizontal loads of the load case or load combination under investigation. In the sliding safety check, the possible resulting earth resistance is calculated in the horizontal load inclination angle of the acting horizontal loads. In the calculation, the resulting earth pressure is applied as a resulting individual load at the foundation end faces. The differently selected terrain on the 4 foundation sides and the different embedment depths are taken into account in the earth pressure calculation.

Surface

The four-sided different definition of the surface is taken into account in the bearing failure analysis. Different embedment depths, berms, constant slopes and polygonal slopes are possible. This surface definition is particularly important for the earth pressure calculation.

Load-bearing capacity calculation (FD-PRO)

The load-bearing capacity calculation can be activated in the basic parameters. Then the foundation is no longer designed and instead of the design a table appears in the output with design values of the base pressure resistance or the absorbable base pressures or the permissible soil pressures for the permanent design situation depending on the selected standard. The programme carries out foundation failure verifications, sliding safety verifications and, optionally, settlement calculations for various foundation dimensions and embedment depths. The user can specify in the dialogue in the basic parameters which foundation dimensions are to be investigated up to which depth and in which steps. First, the programme determines the friction angle of the soil layer in the foundation base and enters this, along with safety coefficients for the permanent design situation, into the formula of the sliding safety verification. This is converted in such a way that an absorbable characteristic load inclination angle H_k/N_k results. This angle is then used to perform foundation failure verifications for various foundation dimensions and embedment depths. Optionally, the load inclination angle can also be specified. In addition, settlement calculations are carried out taking into account the defined soil layers. Exactly the specified thickness of the soil layers is taken into account. No limiting depth is determined. By specifying a permissible settlement, the maximum stress that can be absorbed is determined in the settlement calculation and compared with the base failure

stress that can be absorbed. The load-bearing capacity is then calculated in tabular form from the decisive stresses.

The seismic ground failure verification (FD-PRO)

If seismic loads are defined and the foundation failure check is activated, the seismic foundation failure check can also be activated. EN 1998-5 Annex F is used for this. Here, the stability against seismically induced ground failure is verified. The soil strength and design section forces in the foundation level are linked to the load-bearing forces in the soil.

The punching verification in the soil (FD-PRO)

This verification can be carried out if 2 soil layers are present below the foundation base. If a soft soil is covered by a firmer top layer with a friction angle of more than 25° , the foundation failure verification must also be fulfilled according to the punching shear condition. And this is exactly the case if the cover layer is less thick than twice the foundation width. DIN 4017:2006 Annex B is used for the calculation. In this verification, only the two soil layers directly under the foundation are examined.

Graphical output of the internal forces along the main axes

The course of the internal forces can be displayed under the "Results" tab - optionally with moment and shear force rounding and simulation of a cutting edge bearing.

Data entry – Basic parameters

The definition of properties and control parameters is done in the menu of the left screen section. You can check the effect of the entered values in the graphical representation on the right screen section.

Prior to the first entry, the units (cm, m ...) can be customized:
File ▶ Program Options.

Assistant/ Wizard

The [Assistant](#) (formerly called wizard) appears by default / automatically at startup, but can be switched off.

Input Options in the GUI

The input options in the GUI window are described in the document [Basic operating instructions-PLUS.pdf](#).

Basic parameters

Type of actions

Design values The loads are entered with their partial safety factors and reduced by the specified reducing factors in the soil engineering-specific verifications, if applicable.

characteristic The loads are specified with the characteristic (1.0-fold) value.


Reinforced concrete

Select the desired reinforced concrete standard:

See also [Basis of calculation](#)

According to the selected reinforced concrete standard, the software selects the corresponding standards for soil engineering and bearing failure automatically.

Soil bearing resistance If the option is selected, only the bearing capacity of the soil is output in the form of a table with the design values for the bearing pressure resistance.

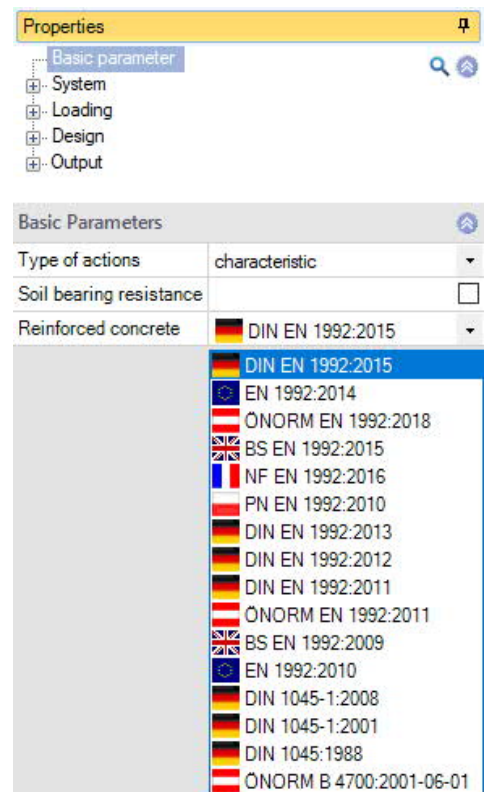

System

Material

The selection of concrete type (normal/lightweight concrete), concrete grade and reinforcing steel grade can be different for foundation and column.

Via "Precast γ_c / γ_s " a dialog with options for the partial safety factors of the material is called up.

Location foundation

The global position related to the foundation axis is only required for communication with other programs such as GEO and SBR+.

Remarks

Click on the button, to enter your own [comments to the system](#).

Foundation

In the foundation ground plan, the x-axis (positive) runs from the left to the right and the y-axis (positive) from the bottom to the top.

- Width x Foundation dimension in x-direction
- Length y Foundation dimension in y-direction
- Height z Foundation height
- Anchoring depth d Lowest foundation depth below the ground level or the top edge of the basement floor.
- Density γ Weight density
- Sleeve FD+: tick this option to activate the menu "Sleeve" (will be displayed under "System").

Base inclination and a 4-sided different [surface definition](#) are possible with the additional option [FL+ PRO](#).





Column

Specification of the following dimensions:

- Round column Option for round columns
- Width x Width of the column
- Thickness y Thickness of the column
- Height z Height of the column
- Layer of Reinforcement Reinforcement layer in the column

Eccentricity

- Eccentricity x Column eccentricity in x-direction
- Eccentricity y Column eccentricity in y-direction

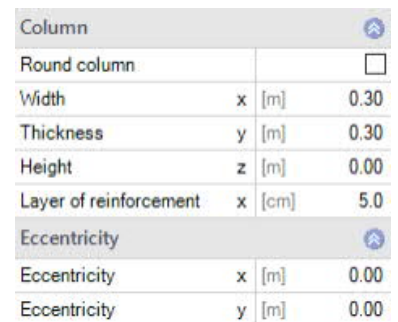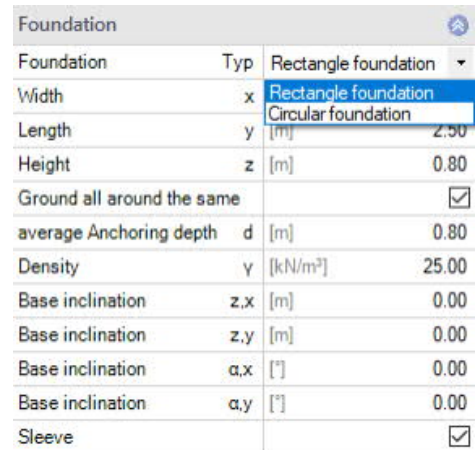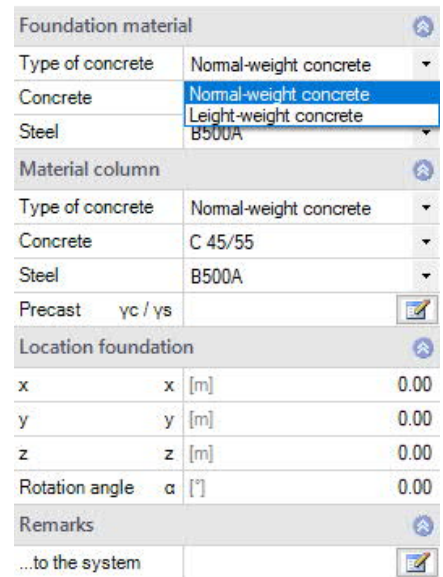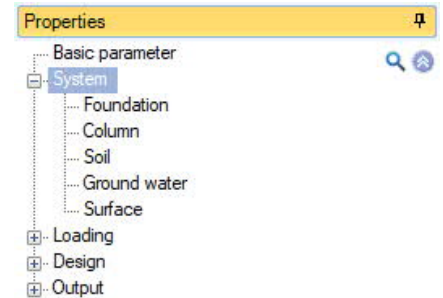

Sleeve

FD+: The "Sleeve" menu is only available if the option "[Sleeve](#)" (menu "foundation") was selected.

Sleeve

Design Moment of Found.. Middle of the wall, sleeve axis (FD+), Wall cut part.

Specify here in which sections the bending design of the foundation should be performed. The bending moment is rounded for design sections in the sleeve center line but not in the wall axis of the sleeve or in the section of the wall of the sleeve.

Formwork FD+: indented (toothed) or smooth; FDB+: toothed.

Note for surfaces with indentations: Column base and sleeve wall are manufactured with serrated formwork (profile depth at least 10 mm) - see examples to design according to Euro code 2, Volume 1 and EC2-1-1, 6.2.5 and 10.9.6.2

Sleeve Calculation according to

[Leonhardt or Schlaich/Schäfer](#).

Geometry verification sleeve If the option is activated, the required anchoring depth is calculated and displayed. The geometry test takes place according to DAfStb booklet 399 p.64-66 and Leonhardt part 3 16.3.3 as well as examples for dimensioning DIN 1045 p.237. The anchoring depth corresponds to 1.5 times the column width with related moments $M/(N \cdot d)$ of less than 0.15. With related moments of $M/(N \cdot d)$ of more than 2, the anchoring depth is twice the column width. Intermediate values are interpolated. The anchoring depth is at least 50 cm. For smooth formwork surfaces in the sleeve, the anchoring depth increases by a further 40% according to Leonhardt Part 3 16.3.3.2. In the [reinforcement dialog](#), the program also offers the option of dimensioning the column and sleeve reinforcement to match the anchorage and lap lengths.

Increase composite stress 50% When calculating the lap joint 'l₀' between the longitudinal column reinforcement and the vertical sleeve reinforcement a bond stress increased by 50 % may be assumed in accordance with booklet 399 due to the existing transversal pressure.

... anchoring depth t The required/selected [anchoring depth](#).

Overhang Absolute distance between the top edge of the foundation and the top edge of the sleeve.

For recessed sleeves, the sleeve overhang should be set to "0".


Width/Length FD+: sleeve dimensions in x/y-direction

Joint width Width of the joint underneath the column base.

Clear span

Top / Bottom FD+: clear width at sleeve top/bottom edge in x / y-direction

Width FDB+: clear width of the sleeve in x / y-direction

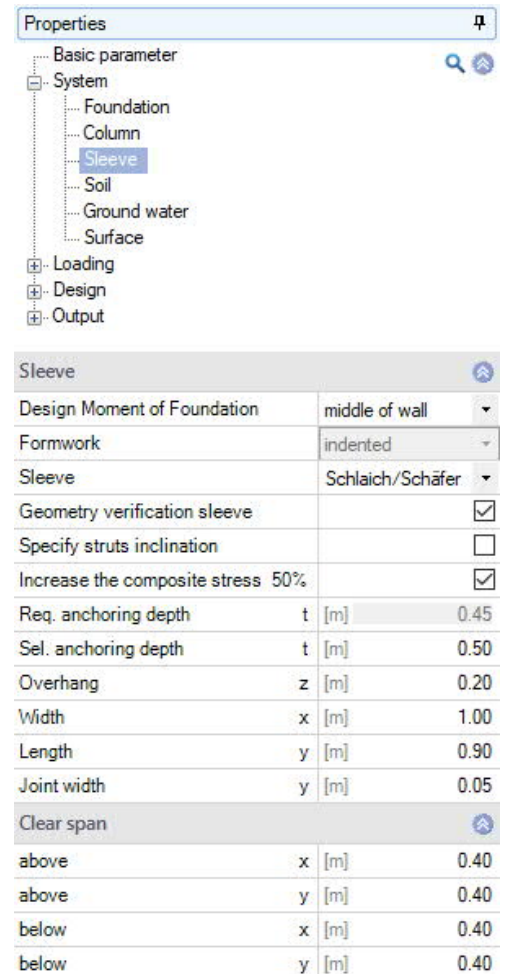

Sleeve			
Design Moment of Foundation		middle of wall	▼
Formwork		indented	▼
Sleeve		Schlaich/Schäfer	▼
Geometry verification sleeve			<input checked="" type="checkbox"/>
Specify struts inclination			<input type="checkbox"/>
Increase the composite stress 50%			<input checked="" type="checkbox"/>
Req. anchoring depth	t	[m]	0.45
Sel. anchoring depth	t	[m]	0.50
Overhang	z	[m]	0.20
Width	x	[m]	1.00
Length	y	[m]	0.90
Joint width	y	[m]	0.05
Clear span			
above	x	[m]	0.40
above	y	[m]	0.40
below	x	[m]	0.40
below	y	[m]	0.40

Mounting panel (FDB+)

Width x / y Width of the mounting panel in in x/y-direction.
 Joint width y Joint width beneath the column base.

Anchoring depth sleeve

The program determines the required anchoring depth according to "Vorlesungen über Massivbau Teil 3 [Fritz Leonhardt] 16.3.3 page 228". It should be noted that the anchoring depth according to "Heft 411 [DAfStb] 7.1 Page 31" is 1.5 ds instead of 1.2 ds. Thereafter, a sleeve depth of 1.5 times the column width is sufficient for existing friction to safely accommodate high bending stressed and reinforced columns. A sleeve with an anchoring depth of 1.2 times the column width appears to achieve lower breaking loads, leads to slippage in the tensile reinforcement of the column and creates high strains in the stirrups.

The anchoring depth depends on the referenced eccentricity e/d:

$$\text{For } \frac{e}{d} < 0.15 : \quad TB = 1.5 \cdot d$$

$$\text{For } \frac{e}{d} > 0.15 : \quad TB = 1.5 \cdot d + 0.5 \cdot d \cdot \frac{\frac{e}{d} - 0.15}{1.85}$$

The required anchoring depth is limited by the program to 2 times the column width.

With smooth concrete surfaces, the minimum anchorage depth is increased by 40 %. Furthermore, the anchoring depth is defined by the program to at least 50 cm.

The calculated anchoring depth is displayed and you should select a value that is at least as high as the specified one.

Also smaller values can be entered if this is appropriate due to smaller moments. A corresponding note is displayed in the output.

Furthermore, it is possible to exclude the determination of the required anchoring depth and to define [column reinforcement](#) and [sleeve reinforcement](#) in the reinforcement dialog and to control the calculation of the anchorage lengths and lap lengths via the [output options](#) "Reinforced concrete / Text Reinforcement" and, if applicable, "Anchoring details".

The clear widths must exceed the column dimensions by one centimetre at least.

The minimum outer dimensions result from the selected clear dimensions plus 0.5 x column width for the walls (Booklet 399, page 66).

The wall thickness must amount to 1/3 of the lowest sleeve opening width at least. The distance of the column to the edge must be at least 10 cm at the upper sleeve opening and 5 cm at the lower sleeve opening. These geometrical conditions are verified during the definition of the column and adjusted, if required.

Soil

Soil properties

Determination $\sigma_{R,d}$ Select whether the design value of the bearing resistance should be entered directly, or to come from a standard table (DIN 1054) or from a user defined (own) table - see section below.

Load-bearing resistance In the case of "direct specification", input of the design value of the bearing pressure resistance $\sigma_{R,d}$ for the permanent design situation BS-P. For the design situations BS-A, BS-E and BS-T, the design value is increased according to the ratio of the partial safety factors of the bearing capacity. For example $1.4/1.2 = \text{approx. } 116\%$ or $1.4/1.3 = \text{approx. } 107\%$.

Permissible settlement Permissible settlement for comparison with the calculated settlement and presentation of the utilisation of the settlement verification.

Eff. friction Angle ϕ' Angle of the inner friction underneath the foundation base.

Soil friction angle The soil friction angle is relevant for the sliding safety verification. If the soil friction angle δ is not determined separately, the characteristic friction angle $\phi'k$ may be used instead of the critical friction angle for in-situ concrete foundations. A value of 35° must not be exceeded. The same also applies to prefabricated foundations if the prefabricated parts are laid in the mortar bed. If the prefabricated foundations are smooth and without a mortar bed, $\delta k = 2/3 \phi' k$ is to be used as the characteristic angle of soil friction.

Inclination of load Enter the maximum tilt of the characteristic or representative bearing pressure-resultant H/V, which should be checked in the case of simplified verification. Otherwise, default values are used.

Dialog If the determination $\sigma_{R,d}$ is not specified directly, the design value of the bearing pressure resistance is taken from a table (standard or user defined) Click the "open" Button to open the table dialog.

Soil properties		
Determination	$\sigma_{R,d}$	From own table
cross section resistance	$\sigma_{R,d}$	direct specification DIN 1054:2021
permissible settlement	s, adm.	From own table
Effective friction angle	ϕ' [°]	30.0
Soil friction angle	δk	2/3 ϕ'
Soil friction angle	δk [°]	20.0
Inclination of load	Hk/Vk	0.35 <input type="checkbox"/>
Table		edit
Table		create
First soil layer		
Stroke weight	γ [kN/m ³]	18.50
Buoyant unit weight	γ' [kN/m ³]	11.00
Effective friction angle	ϕ' [°]	30.0
Cohesion	c' [kN/m ²]	0.00
Dialog		open

Parameters by standard table DIN 1054:

According to Annex The soil pressure is taken from the corresponding table in the soil engineering standard or its National Annex.

Consistence consistency of soil: rigid, half-solid, solid – only with tables A6.6. to A6.8.

Increase (geometry) The permissible bearing pressure can be increased by 20 % if the relevant border conditions (b/d) specified by the applicable standard are satisfied. By ticking this option the value can be edited.

Bearing pressure resistance		
Soil properties		
According to Annex		Table A6.6
Consistence		rigid
Increase (geometry)	[%]	20.0 <input type="checkbox"/>
Increase (strength)	[%]	50.0 <input type="checkbox"/>
Anchoring depth	d [m]	0.50

Increase (strength) The permissible bearing pressure is increased by 50 %, if the soil is sufficiently solid. By ticking this option the value can be edited.

Note: The values are added up under particular conditions (70 %).

Anchoring depth d Lowest foundation depth below the ground level or the top edge of the basement floor.

From own table:

Create: Generates a table with design values of the bearing pressure resistance from several parameters.

Edit: Open the dialog to enter the design value of the bearing pressure resistance σ_{Rd} . The value σ_{Rd} should come from a geotechnical report and should have sufficient guarantees against ground failure and a sufficient limitation of settlements. Furthermore, the corresponding foundation width and anchoring depth must be specified.

The meaning of the other buttons can be seen from the [Tooltips](#).

First soil layer

In this section you can enter the values of the first soil layer.
For additional soil layers click the Button "Dialog – open".

Stroke weight	γ	Specific weight of the soil.
Buoyant unit weight	γ'	Specific weight of the soil layer under buoyancy. This value is only used if groundwater was defined (▶ System ▶ Soil)
Effective friction angle	φ'	Friction angle of the soil in this layer.
Cohesion	c'	Soil cohesion.

Further soil layers / additional values (▶ Dialog „open“)

Library	Cat.	Name	Icon	γ	γ'	φ'	c'	xU'	ν	E_m	PI	α	q_c	E'	Procedure	E^*	E_s	x	k_s	both sides drain..	C_α'	
				[kN/m ³]	[kN/m ³]	[°]	[kN/m ²]	[m]		[kN/m ²]	[kN/m ²]		[kN/m ²]	[kN/m ²]		[kN/m ²]	[kN/m ²]		[m/s]	<input type="checkbox"/>		
1	Table	-	-	18.50	11.00	30.0	0.00	1.50	0.20	6000.00	700.00	0.50	1000.00	3500.00	direct specification	4946.00	2473.00	0.50	1E-09	<input type="checkbox"/>	0.003	
															direct specification							
															from constrained modulus							

Table	Defined layers/values can be selected via a soil layer library.
Category	Soil category according to Annex A of standard NF P94-261. It is important for the bearing capacity calculation from values of the pressiometer test according to Annex D of NF-P94-261.
Name	A name for the soil layer can be assigned here.
Symbol	An abbreviation for the soil layer can be assigned here.
xU	Thickness of the soil layer. Soil layers below 0.10 m cannot be defined.
ν	The Poisson's ratio defines the ratio of a change in thickness to a change in length as soon as a stress is applied. The Poisson's ratio or transverse contraction coefficient has the formula ν or μ . It is one of the elastic material constants and bears the name of the physicist Siméon Denis Poisson.
E_m	Define the pressiometric modulus according to Ménard here. It is needed for the settlement calculation from data of a pressiometer test.
PI	The representative value of the limit pressure according to Ménard in the foundation base of the shallow foundation.
α	Rheological factor for settlement calculation from results of a pressiometer test.
q_c	The peak pressure resistance comes from the pressure test and derives modulus of elasticity and friction angle for base failure and settlement calculation.

Settlement analysis

Procedure	Direct specification or from constrained modulus: To define the compressibility of the soil (<i>Em</i> -module) select - directly in E^* or - from the constrained modulus - <i>Em</i> will be calculated from stiffness/constrained modulus <i>Es</i> and correction factor <i>x</i> (from DIN 4019 T1).
E^*	Compression modulus. The compressibility of the soil can be specified by a pressure settlement line or calculated from the constrained modulus in connection with a correction factor.
<i>Es</i>	Constrained modulus.
<i>x</i>	Correction factor.

Settlement analysis: Consolidation

k_s	Permeability coefficient of the rate of consolidation. The value can be extracted from the soil report.
Both sides drained	For the calculation of the time to approximate decay of consolidation settlement in unilateral drainage the full layer thickness is set, in bilateral drainage only half the layer thickness.
$C\alpha'$	The creep coefficient $C\alpha'$ can be determined from a time-settlement test according to DIN 18135. Usual value range 0.001 to 0.00001.

Ground water

- Ground water existing** This option allows you to define whether groundwater exists (displays the entry "Ground water").
- Ground water** Only if ticked option "Ground water existing".
Absolute depth of the groundwater below the bottom edge of the foundation body.
Negative values can be used to define a groundwater level below the base of the foundation.

Surface


- Ground level...** The ground level above mean sea level refers to the top edge of the earth embankment on the left side of the foundation or in the negative X area. It is positive for ground above sea level.
- Anchoring depth** Anchoring depth of the foundation body.
- Terrain load** Additional characteristic permanent area load on the bearing failure figure, which increases the characteristic punching shear resistance.
- Slope** The ground level can be modeled as horizontal, with a continuous slope, or with a broken embankment.

Continuous:

Here you can define a berm and the slope.

Broken:

Input of the embankment sections. The "+" symbol creates a new table row for a further section.
Parameters are length, height or inclination or rise (the height adjusts automatically to the incline).

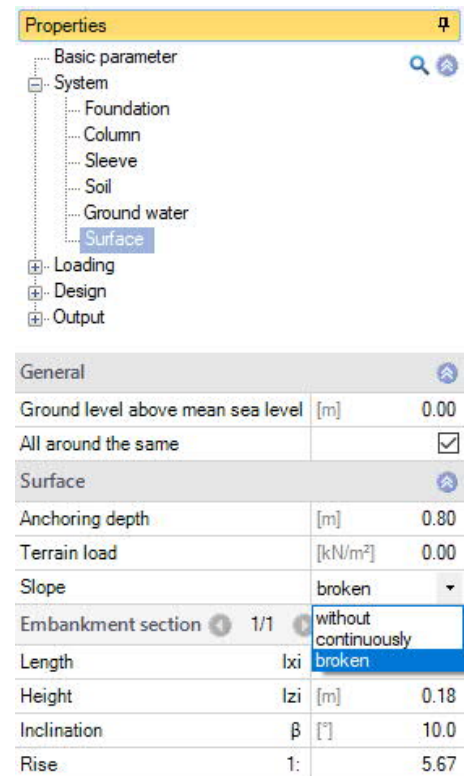


The screenshot shows the 'Properties' window with the 'Surface' tab selected. The 'System' tree on the left includes 'Basic parameter', 'System', 'Foundation', 'Column', 'Sleeve', 'Soil', 'Ground water', and 'Surface'. The 'Surface' tab contains the following settings:

General		
Ground level above mean sea level	[m]	0.00
All around the same		<input checked="" type="checkbox"/>
Surface		
Anchoring depth	[m]	0.80
Terrain load	[kN/m ²]	0.00
Slope		broken
Embankment section	1/1	without continuously broken
Length	lxi	broken
Height	lzi [m]	0.18
Inclination	β [°]	10.0
Rise	1:	5.67

Four-sided different terrain definition with the additional option FD-PRO

With an existing [FD-PRO license](#), the terrain can be defined differently for each of the four foundation faces. To do this, remove the tick from the "All around the same" option – the entry will be extended accordingly.

Loads

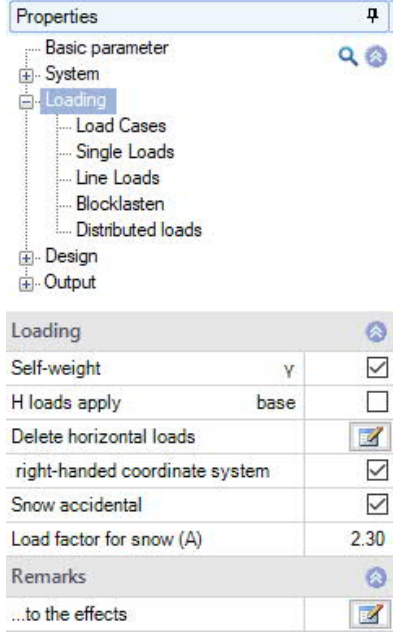
Self-weight γ	Automatic consideration of the self-weight. If the groundwater is above the base of the foundation, the self-weight cannot be deactivated.	
H loads base	<input type="checkbox"/> Option not ticked: The horizontal loads apply at the top edge of the base and generate a moment with a particular lever arm <input checked="" type="checkbox"/> Option ticked: The horizontal loads apply directly in the base joint without generating a moment	
Delete horizontal loads	Delete all horizontal loads with one click! This is useful if many load cases from other applications (GEO, B5...) have been imported.	
Right-hand coordinate system (new standard)	Coordinate system based on the right-hand rule, also referred to as right-hand coordinate system. The signs comply with the sign definitions in engineering mechanics. Positive moments about the x-axis generate pressure on the bottom and/or in the negative area of the foundation. Positive moments about the y-axis generate pressure on the right and/or in the positive X-area of the foundation. If this option is unchecked (default setting until recently) positive moments generate pressure on top right and/or in the positive X/Y-area of the foundation. In the graphic representation, both variants are shown with their absolute values. The arrows indicate the actual direction of action. The values in the data entry fields and in the output documents are indicated with their signs. If you change the sign definition, the sign of the moments about the y-axis changes as well.	
Accidental snow load	When you check this option, snow loads are automatically included as accidental action in addition to the typical design situations. The user can either specify a freely selectable load factor for the accidental snow loads or have it determined automatically by the software. The default value is 2.3	

Remarks


The [remarks editor](#) is called up via the  button. This text appears in the [output](#).

Note: The horizontal loads of the individual load cases can be found/entered under the following point "Load cases".

Load Cases

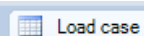Enter the data of the first load case via the data-entry mask or directly in the load case table, which can be displayed by activating the  tab (below the graphic).

Load case toolbar:  - see [Data entry via tables](#)

To add additional load cases, click on the  button once more (a new empty input mask is displayed each time).

Tip: A description is displayed in the status line each time you click into an input field.

Column Loads

Description	Optional text to the selected action can be entered. This text is included in the output.
Action	The appropriate actions can be selected from a list: Permanent loads ... seismic loads (calculation method "characteristic").
Vertical force in Z	Vertical force in the centre of the column
Moment about x/y	Positive moments generate pressure on top right or in the positive x/y section of the foundation.
Horizontal Force in x/y	Horizontal loads apply to the top edge of the foundation or the top edge of the column, if a column height was defined. These horizontal loads generate moments on their way down to the foundation base, which are taken into account automatically by the software.

Standard for the load input are characteristic (1.0 times) values from the support of the column or the wall. Alternatively, the type of stress can be changed to '[design values](#)' in the basic parameters – see ill. right.

By clicking on the arrow icon  you can access a [load value summary](#).


Design situation

The selection of the design situation is displayed if "Design values" has been selected under [Basic Parameters](#) ▶ Type of actions. In the accidental design situation, the option "foundation checks" appears.




Foundation checks

Here you can disregard the foundation design for individual load cases of the accidental design situation (remove check mark). For different situations, such as impact from forklifts, it may be useful to have a load case for the safety checks in earthworks and foundation engineering (gaping joint, positional safety, simplified detection, ground breaking, sliding and subsidence) and in concrete (bending, shear force and punching) disregarded. In this case, only the connection reinforcement or the sleeve are dimensioned in connection with this load case.

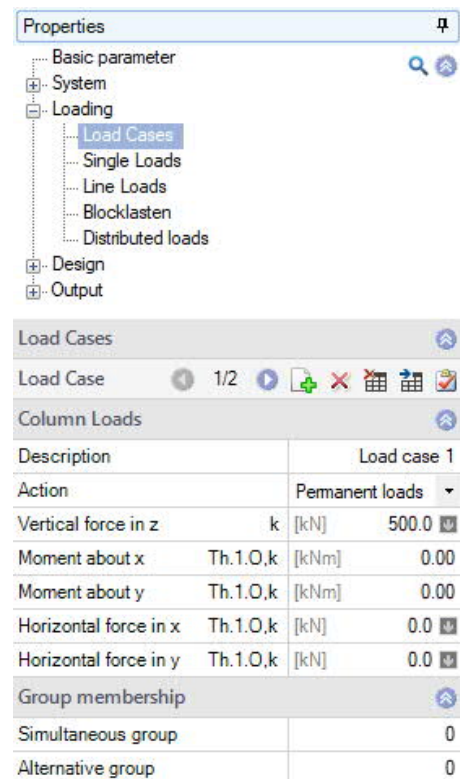Note: According to DIN 1055-9: 2003-08, para. 6.2 (6), the effects of impacts in general structural engineering are not to be passed on to the foundation. With reference to the explanations to the inquiries of the building law authorities and inspecting persons at the working meeting of the union of the test engineers for structural engineering Baden-Wuerttemberg from 14.11.2013 can with use of DIN EN 1991-1-7 NDP to 4.1 (1), note 3 it can be assumed from the same point of view.



The screenshot shows the 'Properties' panel on the right side of the software interface. The 'Loading' section is expanded, showing 'Load Cases' as the selected option. Below this, the 'Load Cases' table is visible, which is a detailed view of the 'Column Loads' table described in the text.

Load Cases		Load case 1	
Action	Permanent loads		
Vertical force in z	k [kN]	500.0	
Moment about x	Th.1.0.k [kNm]	0.00	
Moment about y	Th.1.0.k [kNm]	0.00	
Horizontal force in x	Th.1.0.k [kN]	0.0	
Horizontal force in y	Th.1.0.k [kN]	0.0	
Group membership			
Simultaneous group		0	
Alternative group		0	

Reduction Factors

These input fields are enabled if "Design values" was selected as [calculation method](#).

Reduction Factor N	Reduction coefficient for the forces acting in the z-direction (axial force in the column) and loads (additional concentrated loads, line loads and surface loads).
Reduct. Factor Others	Reduction factors for other internal forces. If a column was designed in a second order analysis, the internal forces are only available on the design level. In order to make verifications in soil engineering available on the characteristic level, the reduction factors are used to adjust the internal design forces to a characteristic level. When using the characteristic calculation method (▶ Basic parameters ▶ Calculation method) in combination with first-order columns, the afore-mentioned situation does not occur.


Group membership

The assignment to a group is displayed if "characteristic" has been selected under ▶ [Basic parameters](#) ▶ Type of actions.

Simultaneous (concurrent) group

Loads of a particular action group can be defined as "always acting simultaneously" by assigning them to simultaneous (concurrent) groups.

III.: *Example for the functioning of alternative and simultaneous groups*

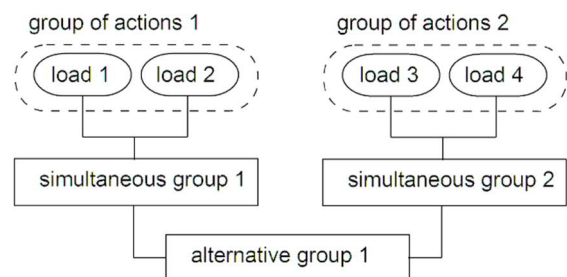


Alternative group

Different variable load cases with similar actions can be assigned to an alternative load case group via the allocation of an [alternative group number](#). Only the decisive load case of this alternative load case group is invoked in the superposition.

Bearing pressure / Actions from the column

Display of the bearing pressure pattern

To ensure traceability, the bearing pressure pattern with stress can be shown for all load cases and superpositions decisive in the verifications. Click the symbol "Bearing pressure pattern" (tab Results) to display the graphic in a popup window. See also ▶ Design ▶ [Soil Engineering](#).

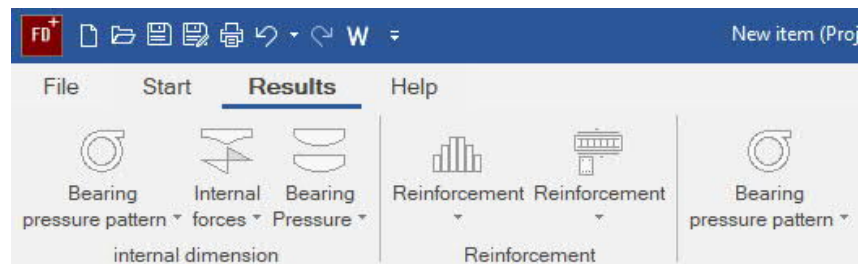


Explanation:


Positive moments M_x and M_y generate compressive strains in the foundation joint in the right top corner and/or the positive x/y section.

The moment M_x rotates about the x-axis and the moment M_y about the y-axis; the horizontal forces H_x and H_y act in direction of the axes. H_x generates a moment M_y and H_y a moment M_x .

The moments resulting from first and second order calculations are used for all verifications. The scope of data to be put out is defined in the [Output profile](#).


Single Loads

Define a new concentrated (single) load by activating the  button (the corresponding input mask is displayed).

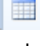
Activating the  **Single load** tab displays the "Single load table" giving an overview of the defined loads.


Toolbar:  - see also [Data entry via tables](#)




Tip: A description is displayed in the status line each time you click into a particular input field.


Nz Value of the axial force of the additional single load. By clicking on the arrow icon  you can access a [load value summary](#).

at ax/ay Position of the additional single load in x or y direction referenced to the foundation centre.

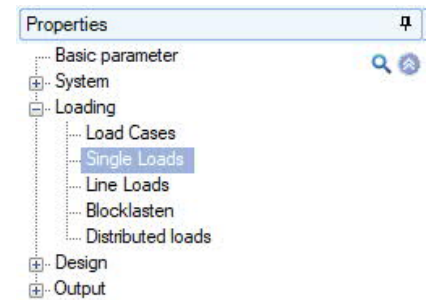Active in LC Assignment of the additional single load to load cases. Activating the button  displays a dialog with the corresponding options.



Single Loads		
Single load	1/2	
Nz	k [kN]	5.0 
at	ax [m]	0.00
at	ay [m]	0.00
Active in load case		1 

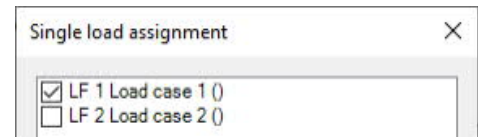

Notes:

- If a single load is assigned to one or several load cases it acts only in combination with the load case(s).
- In the case of the calculation method [design values](#) single loads are processed with the corresponding [reduction factors](#).
- Single loads that are not assigned to load cases are not taken into account in the calculation.
- All verifications are referenced to the column loads. Additional single loads are defined only to check the effects on the bearing pressure, tilting, position stability, sliding and ground failure.
- For the verification of punching shear resistance, the loads that apply in the area of the punching cone must be summarized to a resulting load, because the shear design would be unsafe otherwise.
- With foundations for twin columns you should combine both columns to a single column instead of defining the second column as an additional single- or line load. Otherwise, you will obtain incorrect results in the verification of punching shear resistance.

Line Loads

General operation as described under single loads.

P1 Value at the begin of the line load

at x1/y1 Position of P1 relative to the foundation center

P2 Value at the end of the line load


at x2/y2 Position of P2 relative to the foundation center

Active in load case As described under single loads

Block Loads

Block loads can be arranged automatically in quadrants or defined individually.

Caution. This load is not automatically used in conjunction with superpositions. If you click on Generate (Erzeugen) below, 15 alternatively acting load cases with block loads in different load positions are generated. This load coordinate and the action selected below are used.

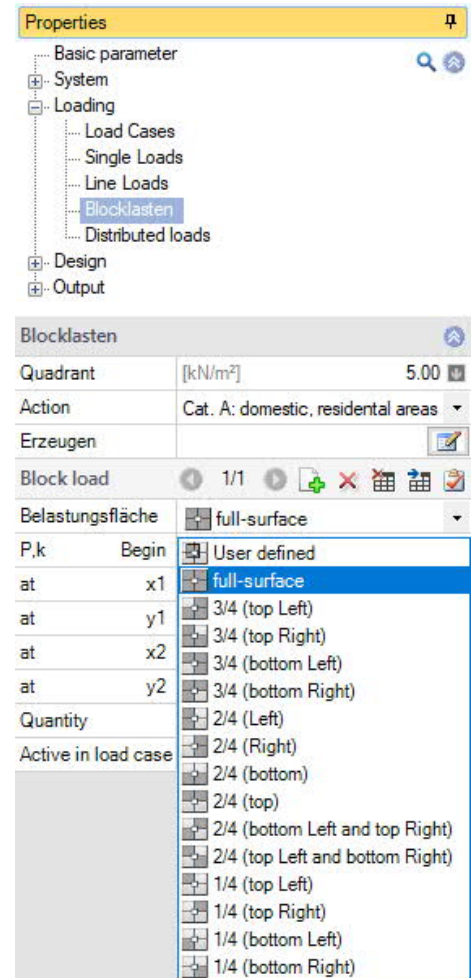

Distributed Loads

Loads by soil on the foundation Height of the earth surcharge, if applicable. In combination with the weight density γ , the soil load generates an area load on the foundation, which is taken into account in the calculation.

Explanatory note: The earth surcharge load refers to the top edge of the foundation. If a wall, column, wall base or sleeve exists, the earth surcharge load is reduced in accordance with the geometry of the structural component.

Note: This value has nothing to do with the self-weight of the foundation.


Density γ, k Weight density of a possible soil load.


Area Load q, k Additional area load on the foundation body.
Explanatory note: The area load acts on the surface of the foundation. If a wall, column, wall base or sleeve exists, the area load is reduced in accordance with the geometry of the structural component. If a top-mounted sleeve exists, the area load also acts on the sleeve, but not in the area of a column casted in the sleeve. See the description of the option "Earth surcharge height" for more information.

Active in load case As described under single loads.

Design / Verifications

Settings - Program settings

Minimum reinforcement	Ductility reinforcement in accordance with the selected reinforced concrete standard.
Transverse reinforcement	If slabs are uniaxially tensioned, as a rule the transverse reinforcement must not be less than 20% of the main reinforcement. In areas close to the supports, no transverse reinforcement of the overlying tensile reinforcement is required, provided there is no bending moment in the transverse direction.
Earthquake: $\Psi_2=0.5$	In accordance with the introductory decree of DIN 4149 for Baden-Württemberg, the combination coefficient $\Psi_2 = 0.5$ for snow loads should be used in the superpositions with seismic loads.
Shear force as beam	Specification whether the shear resistance should be verified on a slab or a beam.
Round out ... internal f. V/M	Only affects the graphical representation. Function: see tool tip or info text.
Shear check automatically	With this option, the program will decide in accordance with the defined geometry, whether to print out a check of punching shear, a shear force or both.
Minimum eccentricity	Considering minimum eccentricities for compression member by EN 1992-1-1 6.1 (4).
Minimum reinforcement pressed member	This option allows you to take a minimum reinforcement for compression members into account.
Design in contact surface	When you check this option, the bending moment for the foundation design is determined at the edge of the column (in the contact surface). When the option is left unchecked, the moment is calculated in the system axis and the moment curve is radiused. If a sleeve was defined, this option is not displayed. You must select the design section in the sleeve dialog in this case.
Transient situation	When you check this option, the transient design situation is used. When you uncheck the option, the persistent situation is used. The accidental situation and the seismic situation are automatically considered if corresponding actions have been defined.
Crack width	Verification for the crack width and the limit diameter for the serviceability limit state SLS.
Stresses	Verification for the stress limitation of concrete and reinforcing steel.
Remarks	Remarks editor is called up via the  button. This text appears in the output .

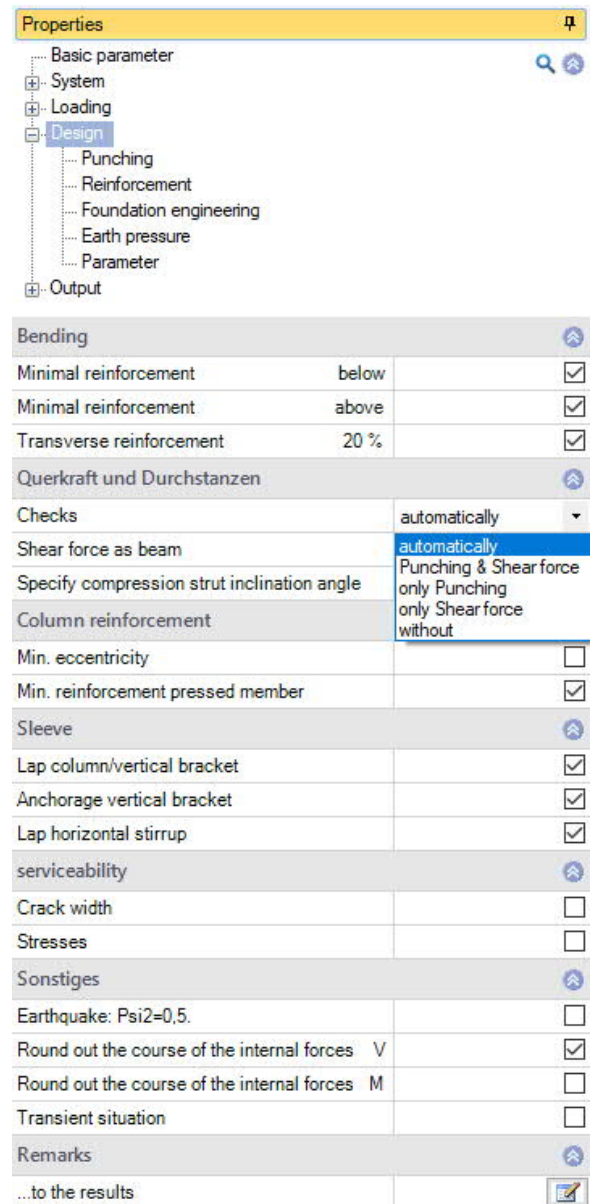

The screenshot shows the 'Properties' dialog box with the 'Design' section expanded. The 'Bending' section has 'Minimal reinforcement below' and 'above' checked, and 'Transverse reinforcement 20%' checked. The 'Querkraft und Durchstanzen' section has 'Checks' set to 'automatically', 'Shear force as beam' set to 'automatically', and 'Specify compression strut inclination angle' set to 'Punching & Shear force only Punching only Shear force without'. The 'Sleeve' section has 'Lap column/vertical bracket', 'Anchorage vertical bracket', and 'Lap horizontal stirrup' checked. The 'serviceability' section has 'Crack width' and 'Stresses' unchecked. The 'Sonstiges' section has 'Earthquake: $\Psi_2=0.5$ ', 'Round out the course of the internal forces V', and 'Round out the course of the internal forces M' checked. The 'Remarks' section has a button labeled '...to the results'.

Punching

The Eurocodes provide several methods for the punching shear analysis. In accordance with DIN 1045, constant β -coefficients are used in the punching shear analysis.


Column type:

Selection of the type of column:

- automatically
- inner column,
- outer (edge) column in the x- or y-direction and
- corner column.

This setting affects the way how the control perimeters are generated.

If you activate the "Automatic" option, the type of column is determined as specified by DIN 1045-1:2008, figure 41 on page 105.

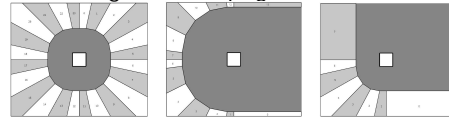

inner column *edge column* *corner column*

Determination β

Selection how to define the punching shear coefficient:

- ductile shear force distribution
- sector model
- constant values
- user-defined value

In combination with plastic shear stress distribution, the selected column type is used for the calculation of the β coefficient in order to take dynamically unbalanced loading in the critical perimeter into account. The static moments of the line of gravity of the critical perimeter are calculated using the set of formulae specified in Booklet 600:2012, table H6.4, page 96. The β -value that is used subsequently in the punching shear analysis results from this calculation.

When using the sector model, the selected column type is not of importance. The application program checks automatically which shape of critical perimeter produces the shortest perimeter length and whether the perimeter intersects the foundation edge in its shortest version. The punching shear analysis is based on the maximum stress of the decisive sector.

See → [Notes concerning the sector model](#).

For constant values, the β -value specified in the design code for the selected column type is used.


User-defined: the "Value of punching/Punching shear coefficient β " entry field is enabled.

Value of punching β :

You can manually set the coefficient for dynamically unbalanced loading in the critical perimeter. It is used in combination with the selected column type in the punching shear analysis with constant factors.


Bearing Pressure $\sigma_{A,crit}$



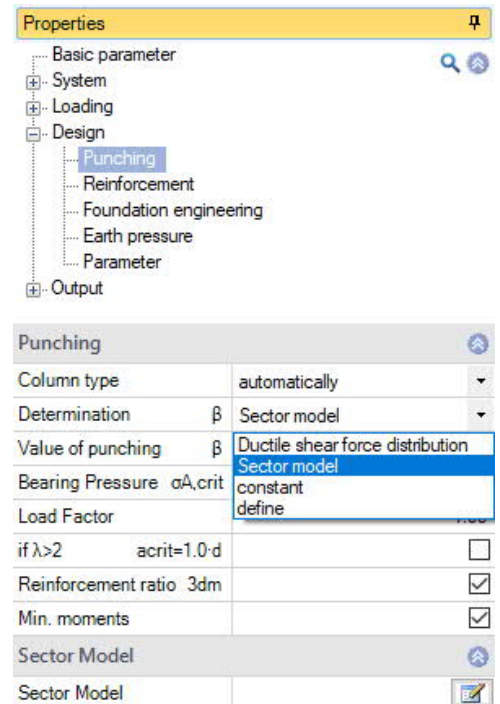


The bearing pressure used for the critical perimeter can be calculated in three different ways. The standard setting is the bearing pressure in the column or base or sleeve axis. The average bearing pressure from the entire foundation area can also be used. This results from the vertical loads divided by the foundation area. As a final and most precise variant, a resultant is formed from the oblique 3, 4 or 5-cornered bearing pressure figure within the critical perimeter polygon. The resultant is then divided by the area of the critical perimeter. Any gaping joint under design loads is also taken into account.



Calculation as per:	<i>This option is only enabled in combination with DIN 1045-1.</i> Selection of the desired punching shear analysis: in accordance with DIN 1045-1 or DAfStb* Booklet. When selecting Booklet 525, a calculation as a compact foundation can be imposed.
Load factor:	The design value of the shear force in the punching shear analysis is multiplied with this factor. It allows you to increase the punching shear load in order to take dynamically unbalanced flexural loading into account, for instance.
if $\lambda > 2,0$ $a_{crit} = 1.0 \cdot d$	according to DIN EN 1992-1-1 NA a constant perimeter at a distance of $1.0 \cdot d$ may be assumed to facilitate the calculation of floor slabs and slender foundations with $\lambda > 2.0$.
Reinforcement ratio	The degree of reinforcement relative to the anchored tensile reinforcement is generally to be calculated as a mean value taking into account a plate width corresponding to the support dimension plus $3d$ per side. Decide whether this simplification should be used.
Min. moments	In order to ensure the transverse load carrying capacity, the plates in the area of the supports are to be dimensioned for minimum moments, if the shear forces determination does not lead to higher values. Decide whether the minimum moments are to be included in the reinforcement distribution.
Ignore κ_{Red}	<i>Only DIN 1045-1:</i> disregard the reduction factor κ_{Red} specified in Booklet 525 [2010] page 98.

Sector model

Activating the button 	displays a dialog with the corresponding options.
... gaping joint	If a gaping joint occurs under the design loads, the radius of the punch cone is set to $1.0 \cdot d$ and instead of the punching shear resistance the transverse force resistance is used. In addition, an analysis of shear resistance is performed at the distance $1.0 \cdot d$.
Ignore bending pressure below	disregards sectors with bending compression stresses at the bottom (lifted parts in case of a gaping joint or additional concentrated loads).
Number of sectors	specify the number of sectors for the curve area of the control perimeters.

Punching	
Sector Model	Critical perimeter
Punching 	
Column type	automatically 
Determination	β Sector model 
Value of punching	β 0.00
Bearing Pressure	αA_{crit} Column axis 
Load Factor	1.00
if $\lambda > 2$	$a_{crit} = 1.0 \cdot d$ <input type="checkbox"/>
Reinforcement ratio	$3d_m$ <input checked="" type="checkbox"/>
Min. moments	<input checked="" type="checkbox"/>
Sector Model 	
In case of gaping joint	$a_{crit} = 1.0d$ <input checked="" type="checkbox"/>
Ignore bending compressive stress below.	<input type="checkbox"/>
Number of sectors	4

Explanations concerning the fully plastic distribution of shear stresses

The calculation of the total load factor β in accordance with the method of fully plastic shear stress distribution is optionally available. The moments applying at the column base $M_{Ex,col}$ and $M_{Ey,col}$ are used to calculate β . These moments are internally converted to the centre of gravity of the critical perimeter. In the iteration process to determine the critical perimeter, the load factor β is re-determined in each iteration. For corner columns, punching shear resistance is verified on all four corners; for outer columns in the x-direction or y-direction, punching shear resistance is only verified on the two decisive facing sides. Inner columns cannot have an eccentric position. Outer columns can have an eccentric position on the respective axis and corner columns on both axes. The calculation of β is based on equation NA.6.39.1 in the National Annex for Germany. You can optionally transfer the decisive superposition and/or the decisive load case to the B6+ application.

Notes concerning the sector model

When using the sector model, the foundation body is divided into sectors. These sectors are located between the critical perimeter and the outer edge of the foundation or a gaping joint.

The stress over the sector section bordering the perimeter and over the statically effective height is calculated from the resulting shear force in the sector.

The maximum stress in a sector at the perimeter border divided by the average stress at the perimeter gives the β -coefficient, which is provided here just for information.

The punching shear resistance is verified with the maximum stress at the perimeter. The maximum stress is obtained by dividing the shear force of the decisive sector by the length of the sector section bordering the perimeter and by the statically effective height of the foundation.

The lowest possible value resulting from the calculation is $\beta = 1.0$.

The minimum value may result if the column has a circular cross-section, the foundation is loaded double-symmetrically and has a circular base area. Relevant standards assume a minimum value of $\beta = 1.1$ because a completely symmetrical case as previously described cannot occur in practice according to these codes. Therefore, FD+ always uses a β -value of 1.1 minimum.

Handling of the sector model in the application program

First, the geometry of the sectors is calculated.

The user can pre-set the number of sectors per quadrant in a range of 1 to 100. The default in FD+ is four sectors for each corner of the column.



The sectors in the corner area have constant inner angles. Only in the special case of three sectors per corner area, angles of $33.75^\circ + 22.5^\circ + 33.75^\circ = 90^\circ$ are used in Germany as recommended in the comment to Eurocode 2.

Reinforcement





You can define up to 2 mats and 2 layers of steel rods over the whole upper foundation area.

Lower layer: 2 mats and one layer of steel rods in the X- and Y- direction according to the selected distribution of the reinforcement (acc. to booklet 631 or variants of it).

See also „chapter [„Distribution / extended reinforcement“](#) dialog.


- cV,u Laying dimensions of the specified reinforcement on the underside of the foundation. The specified reinforcement is designed into the foundation body according to this laying dimension. Based on this, 2D and 3D graphics are created.
- cV,s Laying dimensions of the specified reinforcement on the outside of the foundation.
- cV,o Laying dimensions of the specified reinforcement at the top of the foundation.
- x reinforcement layer for the moments around the y-axis
- y reinforcement layer for the moments around the x-axis
- Longitudinal diameter select the longitudinal diameter for the reinforcement. The software uses this diameter to calculate a reinforcement that covers the requirements. If the minimum and maximum spacing cannot be realised with the initially defined diameters, higher diameters are used.
- Durability: activating the  button displays the [Durability](#) dialog. When you confirm your settings in this dialog with OK, the concrete cover, reinforcement layers and their diameter are checked and adjusted accordingly.
- Creep and shrinkage Opens the dialog for [creep and shrinkage](#).
- Distribution [enhanced reinforcement dialog](#) ().
- Delete reinforcement deletes the defined reinforcement

Properties			
Basic parameter			
System			
Loading			
Design			
Punching			
Reinforcement			
Foundation engineering			
Earth pressure			
Parameter			
Output			

Reinforcement			
Laying measure below	cV,u	[cm]	3.0
Laying measure lateral	cV,s	[cm]	0.0
Laying measure above	cV,o	[cm]	3.0
Layer of reinforcement	x,unten	[cm]	4.0
Layer of reinforcement	y,unten	[cm]	6.0
Layer of reinforcement	x,oben	[cm]	4.0
Layer of reinforcement	y,oben	[cm]	6.0
Longitudinal diameter		14 mm	
Durability		XC2/X0	
Creep and shrinkage			
Distribution			
Delete reinforcement			

Enhanced reinforcement dialog



Click on this symbol  for the extended reinforcement dialog.

In addition to the registers for the lower and upper reinforcement, the registers "Connecting bars" or "Column" is displayed. If a sleeve has been defined (▶ System - Foundation), tab "Sleeve" appears.

General

Practical construction spacing By default, the bar spacing is defined "exactly", i.e. the resulting bar distances are determined on 1 mm accuracy. When this option is ticked, the bar spacing is adjusted to 5, 6, 7, 7.5, 8, 9, 10, 12.5, 15, 17.5, 20, 22.5, 25, 27.5 or 30 cm.

Reinforcement: per m Selection whether the reinforcement should be put out per metre or as an absolute value referenced to one eighth.

Laying measure Actual concrete cover of the specified reinforcement on the bottom side of the foundation (cV,u) or at the outer sides (cV,s) and on the top side (cV,o). The specified foundation is constructed inside the foundation body in accordance with the specified actual cover. The generated 2-D and 3-D representations are based on this construction.

Layer of reinforcement See chapter "[Reinforcement](#)".

Longitudinal diameter: See chapter "[Reinforcement](#)".

Stirrup diameter Select the stirrup diameter to generate the required reinforcement. If the minimum and maximum bar spacing is not feasible, larger diameters are used.

Include transverse fabrics Using fabrics increases the specified reinforcement (existing as). If you check this option, the 'existing as' is also increased for fabrics in the transverse direction. When you use stirrup fabrics, it might be reasonable to exclude transverse fabrics, for instance.

Peak values according to booklet 631 Selection of whether you want to cover the peak values with different reinforcement distributions as an enveloping value curve according to booklet 631 or simply want to distribute the distribution according to booklet 631 differently.

Generate new reinforcement A reinforcement is calculated which covers a minimum of the required reinforcement and a reinforcement for the punching verification without stirrups, as long as the compression strut remains stable (punching shear resistance verification) and the maximum possible bending reinforcement for punching shear resistance verification is not exceeded.

If the minimum and maximum bar spacings are not feasible with this longitudinal diameter, larger diameters are used.

If the defined reinforcement is deleted or modified, the automatic generation of reinforcement is disabled and the defined reinforcement remains.

Reinforcement			
below	above	Connecting bars	Stirrup Cuts Reinforcement
General			
Practical construction spacing			<input checked="" type="checkbox"/>
Reinforcement: per m			<input checked="" type="checkbox"/>
Laying measure below	cV,u	[cm]	3.0
Laying measure lateral	cV,s	[cm]	0.0
Laying measure above	cV,o	[cm]	3.0
Layer of reinforcement	x,unten	[cm]	4.0
Layer of reinforcement	y,unten	[cm]	6.0
Layer of reinforcement	x,oben	[cm]	4.0
Layer of reinforcement	y,oben	[cm]	6.0
Longitudinal diameter		[mm]	14
Stirrup diameter		[mm]	8
Include transverse fabrics			<input checked="" type="checkbox"/>
Cover peak values according to Issue 631 above			<input type="checkbox"/>
Cover peak values according to Issue 631 below			<input checked="" type="checkbox"/>
Generate new reinforcement			
Delete reinforcement			
Reinforcement: distribution			
Reinforcement: distribution			Issue 631 ▼
Bottom base			
Rod steel, outer	X	4 ⬆️ ⬇️ ⬆️	Ø 14 ▼
Rod steel, inner	X	8 ⬆️ ⬇️ ⬆️	Ø 14 ▼
Rod steel, outer	Y	4 ⬆️ ⬇️ ⬆️	Ø 14 ▼
Rod steel, inner	Y	8 ⬆️ ⬇️ ⬆️	Ø 14 ▼
Mat 1		none	▼
Direction		X-Direction	▼
Mat 2		none	▼
Direction		X-Direction	▼


- Should this be insufficient, the program issues a warning.
- If no reinforcement is specified, no warning will be shown.
- With the automatic generation of reinforcement, the program begins with the specified longitudinal diameter.
- With a new generation of the reinforcement an automatic optimization is executed.
- Delete reinforcement** Deletes the defined reinforcement. Only the required reinforcement will be taken into account.
- Reinforcement distribution** Only the type of distribution is set via the area selection. Click on the button to open the selection dialog for the area selection – see chapter [Area selection](#)
- Reinforcement distribution** Area selection in X/Y-direction acc. to booklet 631 DAfStb or "user defined".
- Reinforcement distribution percentage** For user-defined reinforcement distribution, you define here an individual percentage distribution of the reinforcement in 8 areas. These areas can also be more than 100% (total). Furthermore, the areas can be combined via the area selection. For example, into 3 or 5 areas.

Bottom / Top base

- Rod steel, outer/inner** Definition of number (1. column) and diameter (2. column) of rods/steel bars.
- Mat 1/2, Direction** Selection of rebar mats in x/y-direction.

Bar graphs: see adjacent illustration:
As per 1/8th-region

In this graphic you can see the amount of defined (blue) an required (red) reinforcement. Therefore click on the 2D/3D-symbol.

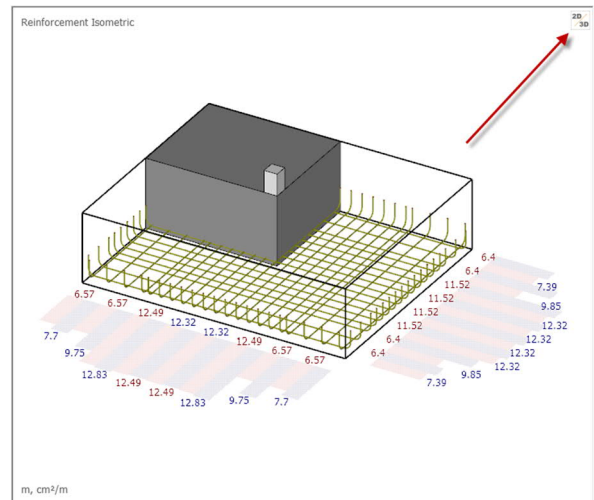

Column / connection

- Connection conditions** Bonding conditions for the column according to NCI Re 8.4.2, Figure 8.2 (automatic, good, moderate). The good bond range may be assumed to be 300 mm high in the lower component area, i.e. Figure 8.2b: $h \leq 300$ mm, Figure 8.2c: $h > 300$ mm. The good bond range can also be assumed for horizontally manufactured rod-shaped components (e.g. supports) that are compacted with an external vibrator and whose external cross-sectional dimensions do not exceed 500 mm.

Column reinforcement		
Connection conditions		automatically
Layer of reinforcement		As corner distributed 4*1/4
Corner bar	Quantity	1
Corner bar	bended	inwards, closed
Concrete cover	cnom [cm]	3.0
Corner bar		1 \updownarrow \emptyset 12
Intermediate bar	X	0 \updownarrow \emptyset 14
Intermediate bar	Y	0 \updownarrow \emptyset 14
Specify column reinforcement		<input type="checkbox"/>
Generate new reinforcement		
Delete reinforcement		

- Layer of reinforcement** Selection:
As spread over side Ali = Are
As spread over side Asu = Aso
As spread over corner 4 * 1/4
As spread over perimeter
As spread over perimeter each As/4


Corner bar quantity	Number of bars.
Corner bar bended	Bending shape of the bars in the column (outwards / inwards, closed / inwards, open / straight bars)
Corner bar	Number and diameter of the corner bars.
Intermediate bars	You can define intermediate bars for the column reinforcement with their vertical legs and hooks arranged parallel to the x-axis that bear torques about the y-axis. The intermediate bars are arranged in groups of up to five bars between the corner bars. The number of groups is determined by the maximum bar spacing and the selected number of intermediate bars.
Specify column reinforcement	Checking this option allows you to specify the required column reinforcement.

Stirrups

Note: some parameters only apply to FD+ or FDB+.

Shear force


Number of rows	Number of stirrup rows.
Stirrup	Number of stirrups per row and the diameter of the stirrup. No stirrups are placed in the area of the support and the sleeve.
Direction	Selection of whether the stirrups are to be installed lengthwise or crosswise.
Ankle length	Length of the foot legs of the stirrups.
Stirrup diameter	Select the stirrup diameter with which the reinforcement is to be generated. With this diameter the programme starts to generate reinforcement that covers the required reinforcement. If the minimum and maximum distances cannot be realised with this diameter, larger diameters are used.

Shear Force	
Number of rows	6
Shear stirrup open	<input type="checkbox"/>
Stirrup	0 <input type="text"/> Ø 8
Direction	X-Direction
Ankle length	[cm] 20.0
Stirrup diameter	8 mm
Generate new reinforcement	
Delete reinforcement	
Stirrup in X-direction	req./exist 0/0 cm ³ /m
Stirrup in Y-direction	req./exist 0/0 cm ³ /m
Stirrups spacing	sw, max/sw, exist. 0/0 cm

Generate new reinforcement	Starts the automatic generation of the stirrup reinforcement.
Delete reinforcement	Deletes the stirrup reinforcement.
Stirrup in X-/Y-direction	Indicates whether the amount of stirrups is sufficient (required/available).
Stirrup spacing	Indicates whether the stirrups are placed close enough to each other.

Sections (cuts)

Font height	Select the font size.
Dimension chain width	Scale the distance of the automatically arranged dimension chains to the foundation. You can also move the dimension chains in the sections with the mouse.
With headings	Select here whether the headings are displayed with the sections.

Reinforcement graphic	
Paper size	A3 - Land... 
Scale	1:50
Papier andeuten	<input type="checkbox"/>
Cuts	
Font height	Reinforcement 0.35 cm
Dimension chain width	[cm] 0.8
with headings	<input checked="" type="checkbox"/>

Sleeve reinforcement

Note: some parameters only apply to FD+ or to FDB+.

Vertical stirrup

Direction corner stirrups Direction in which the horizontal legs of the vertical stirrups in the corners should be oriented.

Apply intermediate bars fully If the option is selected, the intermediate bars are applied completely when calculating the lap length for a 2-axis reinforcement arrangement - otherwise only in the plane of the considered center of gravity of the column reinforcement.

Edge Number and diameter of vertical stirrups in the corners of the sleeve. (*only in FD+*)

Side X,Y Number and diameter of vertical stirrups in the side walls of the sleeve.

Ring Stirrup

Number and diameter of ring stirrups (in the bottom and in the top of the sleeve).

Construction

Laying measure... cV Position of the reinforcing steel in the sleeve (actual concrete cover).

Type Type of the sleeve reinforcement. There are various types for larger and smaller eccentricities.

Angel hooks Check this option if the vertical stirrup should be equipped with an anchoring hook.

Diameter Informative display.

Interstice tF Displays the resulting distance between the column edge and the wall of the sleeve.




Lap length ring stirrup Lap length of the ring stirrups themselves.

Rebar spacing horiz. Horizontal distance a between column reinforcement and the connection reinforcement.
 $a = d_{1,col} + tF + c_{nom} + d_{s,fd}/2$

Arrangement height Percentage of the distribution height of the top/bottom horizontal stirrups relative to the anchorage depth of the column in the sleeve.

Sleeve geometry Click on the edit button to open a dialogue for the sleeve (sleeve) properties.

Reinforcement	
below	above
Column	Sleeve
Stirrup	Cuts
Re	

Vertical brackets	
Direction of the corner vertical brackets	X-Direction
Apply intermediate bars fully	<input checked="" type="checkbox"/>
Edge	Ø 12
Side in x-direction	Ø 14
Side in y-direction	Ø 14
Ring Stirrup	
above	Ø 14
below	Ø 14
Construction	
Laying measure lateral and above s,o [cm]	2.0
Laying measure below cV,u [cm]	10.0
Type	Stirrup for l
Angel hooks	<input type="checkbox"/>
Diameter Support reinforcement [mm]	12
Interstice tF [cm]	5.0
Lap length ring stirrup [cm]	25.0
Rebar spacing horizontal a [cm]	25.0
Specify the proportion of column reinfor	<input type="checkbox"/>
Arrangement height above [%]	33.3
Arrangement height below [%]	66.6
Sleeve geometry	
Generate new reinforcement	
Delete reinforcement	

Area selection




Areas in the x- and y-directions

The area selection only determines the way the defined reinforcement will be distributed. Reinforcement is only generated when you activate the button "Generate new reinforcement" or when you define reinforcement.

8 areas: correspond to the distribution of the reinforcement in accordance with Booklet 631 of the German Committee for Reinforced Concrete DAfStB. Additional options: 5 / 3 / 1 area(s).

When selecting the number of areas, the peak values of the distribution specified in Booklet 631 of the German Committee for Reinforced Concrete DAfStB are covered.

In the illustrated example, the distribution of the reinforcement over three areas in the y-direction produces a rate of 122 % (= 14+14+14+19+19+14+14+14) of the reinforcement to be distributed. This rate is higher than the rate required by the standards, but distribution is easier to realise then.

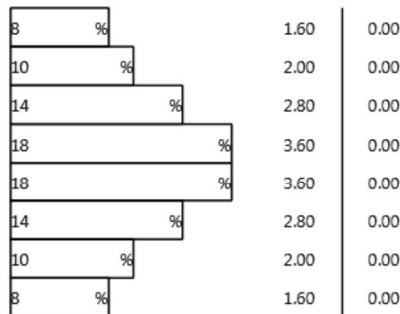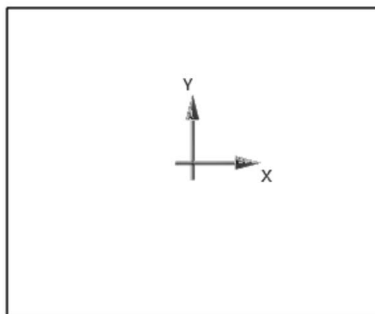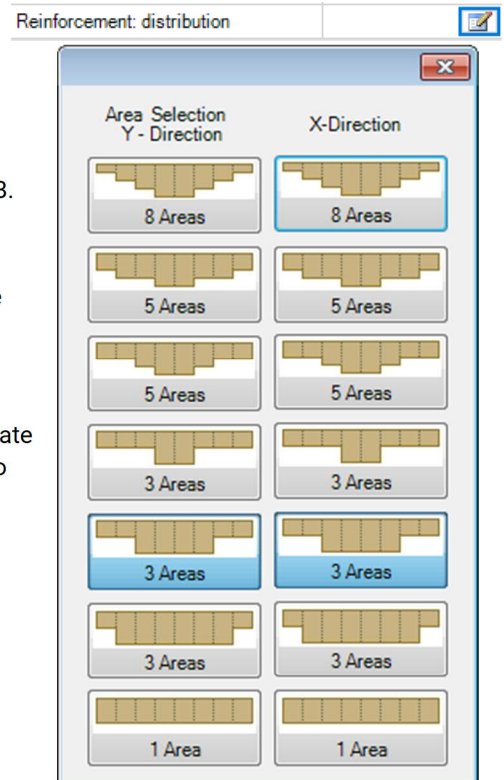

14	14	14	19	19	14	14	14
%	%	%	%	%	%	%	%

erf. As [cm²] vorh.As [cm²]

3.45	3.45	3.45	4.68	4.68	3.45	3.45	3.45	erf. As [cm ²]
0.00	0.00	0.00	0.00	0.00	0.00	0.00	0.00	vorh.As [cm ²]

III.: Example of reinforcement distribution

Notes concerning the selected reinforcement

Reinforcement ratios

The software calculates the absolute reinforcement quantities in eighth-part stripes in the x- and y-directions of the foundation body in accordance with the requirements specified by Booklet 631 of the German Committee for Reinforced Concrete DAfStB. In this calculation, the individual rebars in an eighth-part area are NOT added up but the quantity of reinforcing steel per metre of the reinforcement object in the area of one eighth is added up. See also the following calculation example.

Calculation example

See the illustration on the previous page.

The eighth-part area of a foundation with a width of 2 m has a width of 25 cm. The reinforcement object defined in this area consists of 10 bars with a diameter of 14 mm each. The spacing of the bars from axis to axis is 10 cm. The object covers a total width of 1 m. The width from the first bar to the last amounts to 90 cm. 5 cm on each side (half the bar spacing of 10 cm) must be added because of the affected width of the first and last reinforcement bar of the item. The total width is consequently 1 m. This object produces the following reinforcement portion:

$$A_s = [1.4 \text{ cm} \cdot 1.4 \text{ cm} \cdot \pi / 4] \cdot 10 \text{ bars} / 1 \text{ m} = 15.4 \text{ cm}^2/\text{m}.$$

Due to the edge distance of this object of 17.5 cm (rounded to 0.18 m), it extends only 12.5 cm into the eighth-part with a width of 25 cm. The value of 12.5 cm is obtained by deducting the affected width of the last rebar of 5 cm due to a bar spacing of 10 cm from the edge distance: $17.5 \text{ cm} - 5 \text{ cm} = 12.5 \text{ cm}$. Therefore, only a reinforcement portion of $15.4 \text{ cm}^2/\text{m} \cdot 0.125 \text{ m} = 1.92 \text{ cm}^2$ results for this object in the eighth part.

The existing and required reinforcement quantities in the eighth parts are represented graphically and in the form of text in the data entry and output sections, optionally in cm^2 or cm^2/m – see

► Reinforcement ► [Distribution](#).

The reinforcement in the eighth parts is also used in the shear force resistance verification and in the punching shear analysis. All reinforcement quantities in the eighth parts of the examined perimeters are added up and converted to ratios. If the existing reinforcement quantity exceeds the required quantity, it is used instead. The resulting reinforcement ratios are limited by the maximally permissible reinforcement ratios for the shear force and punching shear analyses.

Reinforcement graphic (additional option FD-BEW)

Plan output for reinforcement. Reinforcement sections can optionally be output in the form of a reinforcement plan. This option can be used as a DEMO for 30 days and can be purchased.

Paper size	Opens a dialog for selecting the paper size and paper orientation. With options for color printing/title block.
Scale	Select the scale.
paper edges	Shows the paper edges in the graphic. This is useful if the individual sections are to be arranged on the sheet by dragging with the mouse.

Foundation engineering

Verification format


Define here whether a

- simplified proof, a
- exact proof or a
- userdefined proof

should be performed.

The simplified verification includes compliance with the design value of the base pressure resistance with limitation of the inclination of the load resultant.

The exact verification format includes a bearing failure verification, a sliding safety verification and a settlement calculation.

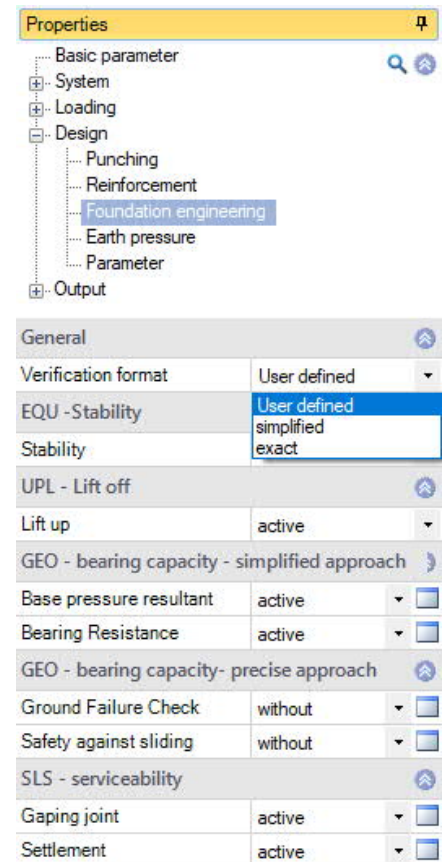

User-defined proof format

All verification options are offered here for individual selection.

Stability

Comparison of destabilizing and stabilizing design values of the effects related to a fictitious tilting edge at the foundation edge in the EQU limit state. With decreasing stiffness and shear strength of the subsoil, the tilting edge moves into the foundation. Therefore, the gaping joint must also be investigated.

Lift up

Comparison of destabilizing and stabilizing vertical design values in the UPL limit state.

Base pressure resultant

Requirement for the simplified verification: the inclination of the characteristic or representative bearing pressure resultant complies with the condition $H/V < 0.2$.

Bearing resistance

The verifications for the limit states ground failure, sliding and serviceability (verification of the settlement) are replaced by empirical design values of the base pressure resistance.

Eccentricity limit

Proof according to NF P 94-261 13.3 for the eccentricity of the load.

Ground failure check

In the [ground failure analysis](#) the shear resistance of the soil below the foundation level are considered.

The soil layers above the foundation level are considered as a top load when the soil plane and the ground top level are horizontal.

Seismic

With the additional option FD-PRO: if the option is selected, a seismic bearing failure analysis according to DIN EN1998-5:2010 Appendix F is performed. A dialog with the appropriate selection/input parameters is displayed.

Depth coefficients

The depth coefficients take into account the favorable influence of the shear strength in the fracture joint above the foundation base in the ground failure verification. In some European countries, this effect can be taken into account with coefficients > 1 .

Safety against sliding


When the load vector is not perpendicular to the base surface, the resistance of the foundations against sliding in the base area must be verified.

Settlement

For the settlement analysis, the compression of the soil should be taken into account down to the settlement influence depth t_s . The depth t_s may be assumed at the level at which the additional perpendicular stress generated by the mean settlement effective load has an amount of 20% of the effective vertical output stress of the soil.
One of 5 calculation methods can be selected.

Earth pressure (with additional option FD-PRO)

Allows the approach of Erddruck with existing licensing of [FD-PRO](#).

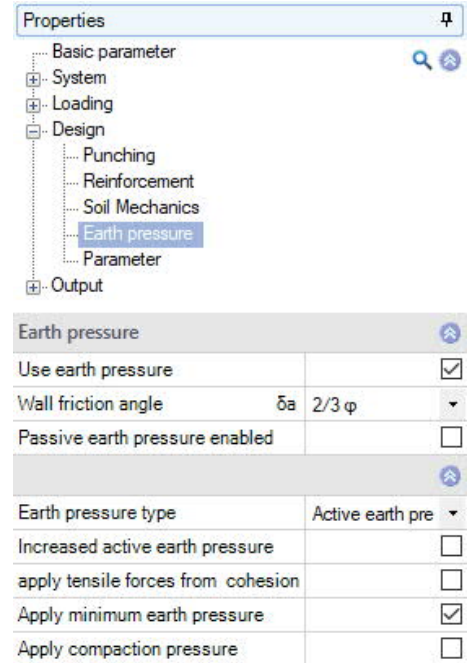

The screenshot shows the 'Properties' dialog box with a tree view on the left and a settings table on the right. The tree view includes categories like System, Loading, Design, and Output, with 'Earth pressure' selected under Design. The settings table contains the following options:

Earth pressure		
Use earth pressure		<input checked="" type="checkbox"/>
Wall friction angle	δ_a 2/3 φ	<input type="checkbox"/>
Passive earth pressure enabled		<input type="checkbox"/>
Earth pressure type		
Earth pressure type	Active earth pre	<input type="checkbox"/>
Increased active earth pressure		<input type="checkbox"/>
apply tensile forces from cohesion		<input type="checkbox"/>
Apply minimum earth pressure		<input checked="" type="checkbox"/>
Apply compaction pressure		<input type="checkbox"/>

Parameter


User defined

Mark this option if you want to change the safety factors and design rules that deviate from the set standards.

The corresponding input fields/editing buttons are then displayed.

Use the "Edit" button to open the respective tables for changing the values - the information texts for the individual parameters are displayed in the lower window area when you click in an input field.

- Support of all 3 verification methods according to Eurocode 7, adjustable for all national annexes.
- The partial safety factors and combination equations for the geotechnical verifications can be edited.
- Since all table values can be changed, the standard setting for a specific country (e.g. India, Sweden, etc.) can be easily defined.

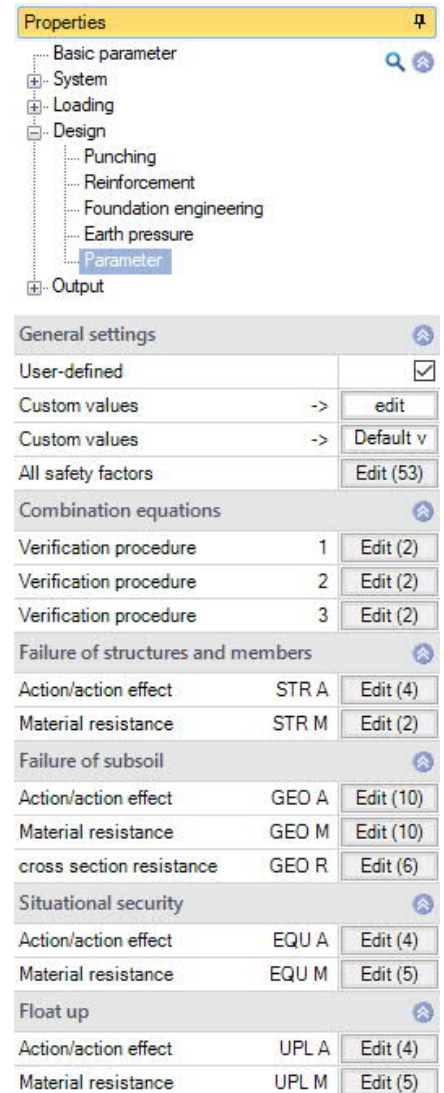

The screenshot shows the 'Properties' panel in a software application. The 'Parameter' option is selected under the 'Design' category. Below the panel, the 'General settings' table is displayed, showing various parameters and their corresponding 'Edit' buttons.

General settings		
User-defined		<input checked="" type="checkbox"/>
Custom values	->	edit
Custom values	->	Default v
All safety factors		Edit (53)
Combination equations		
Verification procedure	1	Edit (2)
Verification procedure	2	Edit (2)
Verification procedure	3	Edit (2)
Failure of structures and members		
Action/action effect	STR A	Edit (4)
Material resistance	STR M	Edit (2)
Failure of subsoil		
Action/action effect	GEO A	Edit (10)
Material resistance	GEO M	Edit (10)
cross section resistance	GEO R	Edit (6)
Situational security		
Action/action effect	EQU A	Edit (4)
Material resistance	EQU M	Edit (5)
Float up		
Action/action effect	UPL A	Edit (4)
Material resistance	UPL M	Edit (5)

Sleeve foundation

Two different calculation methods are available for the calculation of a sleeve with rough formwork:

- Schlaich/Schäfer: "Konstruieren im Stahlbetonbau"; BK 2001/2 4.7.3 analogously to "Beispiele zur Bemessung nach Eurocode 2" Volume 1, Chapter 12
- Leonhardt and Mönning: "Vorlesungen über Massivbau", Part 3, page 227 and subsequent pages, analogously to "Beispiele zur Bemessung nach DIN 1045"


The following calculation method is available for the calculation of a sleeve with smooth formwork:

- Leonhardt and Mönning: "Vorlesungen über Massivbau", Part 3, page 227 and subsequent pages, analogously to "Beispiele zur Bemessung nach DIN 1045"

Calculation in accordance with "Beispiele zur Bemessung nach Eurocode 2", Volume 1, Chapter 12

The prerequisite for the calculation based on this method is that the column base, the sleeve filling concrete and the foundation interact like a monolithic structure. The moment and the longitudinal forces generated by the column are transferred via vertical shear stresses to the sleeve. To ensure this, the sleeve and the column need profiling of at least 10 mm. The filling concrete must have the same quality as the foundation concrete. If the required embedment depth is calculated with the help of the anchoring depths and/or the lap lengths, the value of 1.5 times the column width prescribed by DIN EN 1992-1-1/NA 10.9.6.3 (1) is on the safe side and therefore recommendable. The bending design in connection with the sleeve can be performed in the sleeve axis with rounding of the moment or in the centre of the sleeve wall or in the contact surface of the sleeve.

The calculation is based on the following framework model:

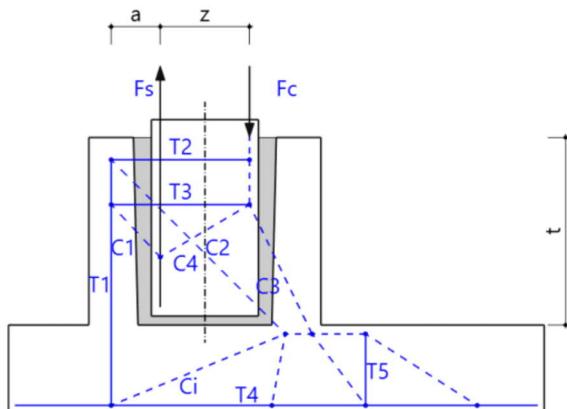

The following verifications are performed:

Introduction of the shear force V_{Ed} into the sleeve via the tensile force T_2 → horizontal stirrups

$$T_2 = V_{Ed}$$

$$\text{Req. } A_{s,\text{horizontal}} = T_2 / f_{yd}$$

Absorption of the tensile force T_1 caused by F_s and T_2 → vertical stirrups

Portion T_1 from deflection of T_2

t = sleeve embedment depth plus joint underneath the column

a_w = spacing of the sleeve wall axes

$T_1 = T_2 \cdot t / a_w$ = portion of the tensile force due to the deflection of T_2

d_w = sleeve wall thickness

t_f = joint between the sleeve wall and the column

d_1 = centre of gravity of the reinforcement in the column

$a = d_1 + t_f + d_w / 2$ = offset of the reinforcement

z = internal lever arm of the column reinforcement

Req. $A_{s,F}$ = assumed column reinforcement

$F_s = \text{req. } A_{s,F} \cdot f_{yd}$ = tensile force of the column

$T_1 = F_s \cdot z / (a + z) + T_2 \cdot t / a_w$

Req. $A_{s,z} = T_1 / f_{yd}$

Absorption of the tensile force T_3 due to the expansion effect of the compression struts C1 and C2 → horizontal stirrups

$\tan \theta = [\text{exist. } l_0 - 0.5 \cdot (l_{0,z1} + l_{0,z2})] / a$

$T_3 = C_1 = T_1 / \tan \theta$


Req. $A_{s,\text{horizontal}} = T_3 / f_{yd}$

The required horizontal stirrups are to be distributed over the lap lengths of the vertical stirrups l_0 .

Calculation in accordance with Leonhardt and Mönning

"Vorlesungen über Massivbau", Part 3, page 227 and subsequent pages, analogously to "Beispiele zur Bemessung nach DIN 1045"

Rough formwork

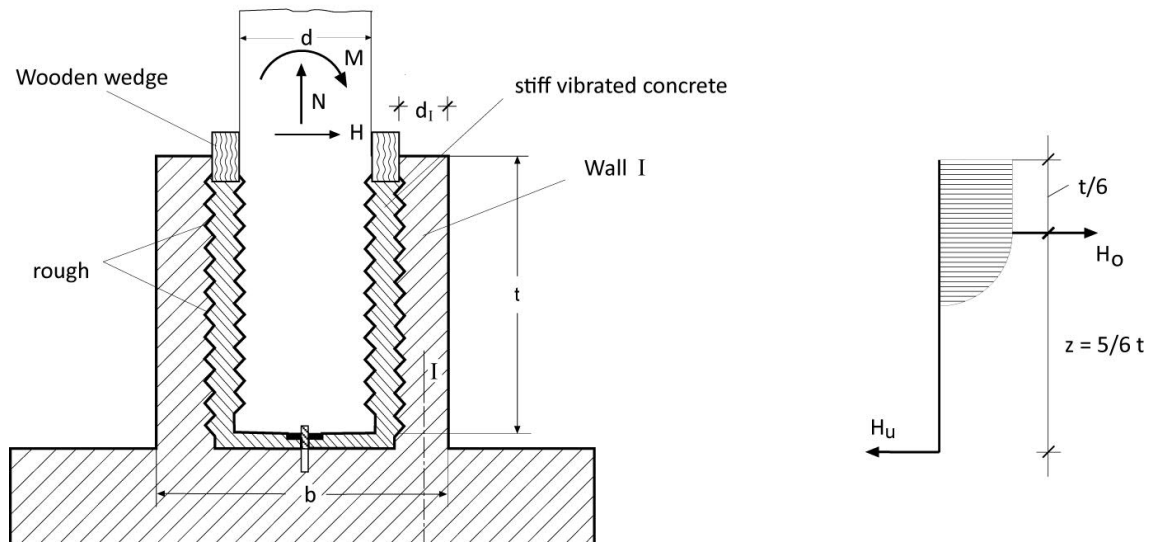

Introduction of the shear force V_{Ed} and the moment M_{Ed} into the sleeve

M_{St} = design moment of column base

H_{St} = V_{Ed}

H_o = $6/5 M_{St} + 6/5 H_{St}$ = horizontal force on top

H_o = $6/5 M_{St} + 1/5 H_{St}$ = horizontal force on bottom

z = $5/6 t$ = lever arm

d_w = sleeve wall thickness

a_o = sleeve wall width

d_w = sleeve wall thickness

$\tan \alpha$ = $z / (a_o - 0.15a_o - d_w/2)$

Z_h = h_o

Z_v = $Z_h \tan \alpha$


Vertical sleeve reinforcement:

Req. $A_{s,z}$ = Z_v / f_{yd}

Horizontal sleeve reinforcement:

Req. $A_{s, \text{horizontal}}$ = T_3 / f_{yd}

Smooth formwork

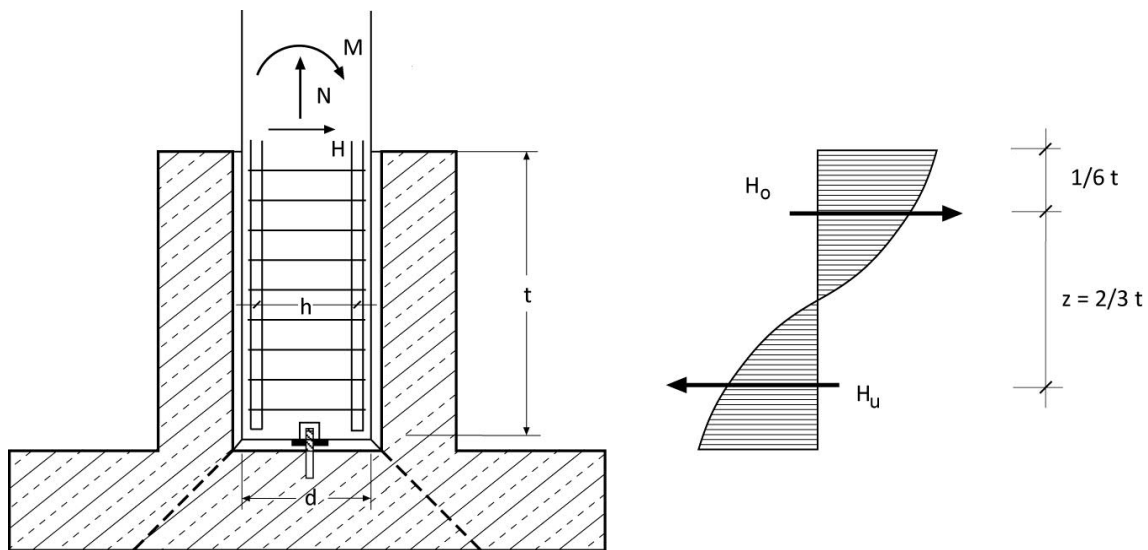Introduction of the shear force V_{Ed} and the moment M_{Ed} into the sleeve

M_{St} = design moment of column base

H_{St} = V_{Ed}

H_o = $3/2 M_{St} + 5/4 H_{St}$ = horizontal force on top

H_u = $3/2 M_{St} + 1/4 H_{St}$ = horizontal force on bottom

z = $2/3 t$ = lever arm

d_w = sleeve wall thickness

a_0 = sleeve wall width

d_w = sleeve wall thickness

$\tan \alpha$ = $z / (a_0 - 0.15a_0 - d_w/2)$

Z_{H_o} = H_o

Z_{H_u} = H_u

Z_v = $Z_h \tan \alpha$

Vertical sleeve reinforcement

Req. $A_{s,z} = Z_v / f_{yd}$

Horizontal sleeve foundation on top

Req. $A_{s, \text{horizontal}} = T_3 / f_{yd}$

Horizontal sleeve foundation on bottom

Req. $A_{s, \text{horizontal}} = T_3 / f_{yd}$

Anchorage of the tension rods in the column for the tensile force F_s

The required anchorage length for the tension and compression bars of the column reinforcement is calculated and compared to the existing anchoring length. The existing anchoring length is determined by the embedment depth minus the actual concrete cover. It is assumed that the column reinforcement can also be a compressive reinforcement. In combination with the German standard, hooks, angular hooks and loops are not allowed. Therefore, straight bars are used in the calculation, $\alpha_1 = 1.0$.

$l_{b,rqd} = (d_s/4) / (\sigma_{sd}/f_{bd}) =$ basic value of the anchoring length


$l_{bd,erf.} = \alpha_1 * l_{b,rqd} * (A_{s,req.} / A_{s,exist.}) =$ required anchorage length

$l_{bd,vorh.} = t - c_v =$ existing anchorage length

Anchorage of vertical stirrups in the sleeve

The required anchorage length of the vertical stirrups in the sleeve is calculated and then compared to the existing anchorage length which is obtained by deducting the concrete cover from the foundation height.

Lapping of the perpendicular stirrups and the vertical tensile reinforcement in the column

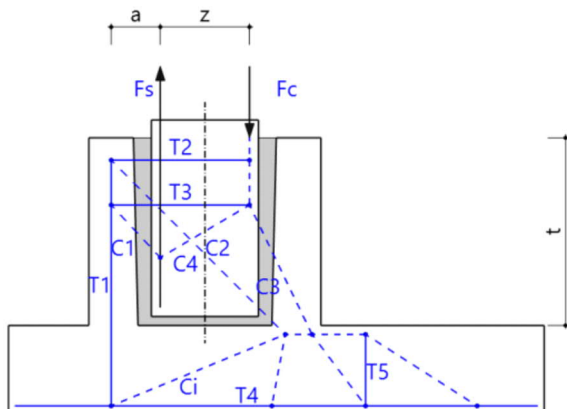

The lap lengths of the column reinforcement and the vertical sleeve reinforcement are calculated. The required lap length is decisive in this connection. When calculating the lap length of the column reinforcement, the fact that only the tensile force portion that is transferred via the compression strut C1 is transmitted via the lap joint is taken into account. When calculating the lap joint l_0 a bond stress increased by 50 % is assumed in accordance with Booklet 399 due to the existing transversal pressure.

Output

If you have checked the options "Text on reinforcement" and "Details of anchorage" in the in the Scope of the [output menu](#), the equations and intermediate results of the sleeve calculation are put out.

Block Foundation

Block foundations can be calculated in program "FDB+".

You can access the program FDB+ directly from the FRILO Control Center or from the program Isolated Foundation – FD+ under the item "Connected Programs" (assuming that the FDB+ program is installed on your computer).

The calculation is performed in accordance with the method described in "Deutscher Beton- und Bautechnik-Verein E.V. - Beispiele zur Bemessung nach Eurocode 2".

A block foundation is a foundation, in which the sleeve is embedded.

A block foundation is characterized by an appropriate connection between the bottom part of the column and the walls of the sleeve, due to which a monolithic work of the foundation with the column can be assumed.

The flexural design of a block foundation, in contrary to an isolated foundation, is conducted for a cross-section along the edge of a column. The resulting flexural design is made according to Heft 631, T 2.10. The task is made separately for x and y directions. Connection reinforcement in the foundation, as well as anchorage and overlapping lengths of the column reinforcement and the connection reinforcement are determined.

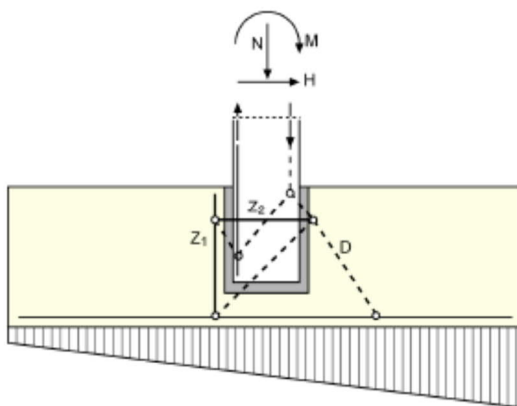
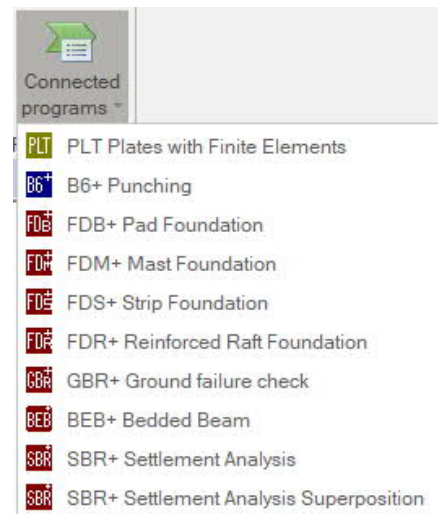


Fig.: Determination of the vertical stirrups A_{sv} with tensile force Z_1 , determination of the horizontal stirrups A_{sh} with tensile force Z_2

The punching shear analysis is performed for:

- the erecting stage (for the self-weight of the column, which is applied during assembly)
- the final stage

Output

Output scope / Options

By checking the desired options, you can determine the scope of text to be put out.

Output as PDF

The Document tab displays the document in PDF.

See also [Output and printing](#).

Properties

- Basic parameter
- System
- Loading
- Design
- Output
 - General
 - Foundation engineering
 - Reinforced concrete

Output

- Output scope: User defined
- EQU - Stability: User defined
- Stability: Brief, Standard, Detailed
- UPL - Lift off
- Lift up: only in results overview
- GEO - bearing capacity - simplified approach
- Base pressure resultant: in equation form
- Bearing Resistance: in table form
- GEO - bearing capacity - precise approach
- Safety against sliding: deactivated
- Ground failure: deactivated
- SLS - serviceability
- Gaping joint: in table form
- Settlement: in table form

Main Document Content:

FRILO Software GmbH
Stuttgarter Str. 40 70469 Stuttgart
49 711 810020 - info@frilo.eu

Project: - Position: (New) Set: 2

Foundation acc. to DIN EN 1992-1-1/NA/A1:2015-12 and DIN EN 1997-1/NA:2010-12

Member	Concrete	Steel	Width (x) m	Width (y) m
Foundation	C 30/37	B 500B	2.50	0.30
Column	C 30/37	B 500B	1.00	0.40
Pocket, exterior			0.40	0.40
pocket, top			0.40	0.40
pocket, bottom			0.40	0.40

Embedment depth of the foundation in the subsoil 0.80 m. Without groundwater Design val resistanc $\sigma_{rd} = 215.06 \text{ kN/m}^2$. Joint width below the column base 0.05 m. The side faces of inner surfaces of the pocket holes shall be produced with a corrugated or formwork with in depth is at least 10 mm, see EC2-1-1, 6.2.5, (NCI) Fig. 6.9 Indented joint and 10.9.6.2.

Section	Δx m	Δz m	β	Rise
1	1.00	0.18	10.0	1:5.7

No.	Designation	d m	from m	to m	v kN/m ³	v' kN/m ²	ϕ'_s	c' kN/m ²
1	gravel (gravel, closely tiered GE)	1.50	0.00	-1.50	16.00	8.50	30.0	0.00

Further values of the soil layers for the settlement calculation

No.	d m	from m	to m	v	E_s kN/m ²	x	E^* kN/m ²	k m/s	Drainage
1	1.50	0.00	-1.50	0.2	200000.00	0.50	400000.00	$2.000 \cdot 10^{-3}$	one-sided

Characteristic values

Durability

Requirements durability:

	top	bottom
attack on concrete	XF	XD
reinforc. corrosion	XC2	XC2
min. concrete class	C 16/20	C 16/20
long. reinforcement	$d_{s,l} = 14 \text{ mm}$	$d_{s,l} = 14 \text{ mm}$
allowance in design	$\Delta c_{dev} = 15 \text{ mm}$	$\Delta c_{dev} = 15 \text{ mm}$
reduced cmin	$\geq C 16/20$	$\geq C 16/20$
longitudinal bars	$c_{min,l} = 15 \text{ mm}$	$c_{min,l} = 15 \text{ mm}$
concrete coverage	$c_{min,c} = 30 \text{ mm}$	$c_{min,c} = 30 \text{ mm}$
laying dist. link	$c_l = 30 \text{ mm}$	$c_l = 30 \text{ mm}$
all crack width	$w_{max} = 0.30 \text{ mm}$	$w_{max} = 0.30 \text{ mm}$

Results graphics

You can display result graphics via the "Results" tab.

Results

- Bearing pressure pattern (internal dimension)
- Internal forces
- Bearing Pressure
- Reinforcement
- Reinforcement
- Bearing pressure pattern (external dimension)
- Base failure
- Settlement
- Influence coefficients
- Settlement coefficient
- Time-settlement curve

Export to Allplan

The menu option 'File' - 'Export' allows you to export a suitable file to Allplan.

Explanatory notes on the output of the results (table)

Output of the reinforcement

Reinforcement in x-direction bottom (m,cm²)

from	-1250	-938	-625	-313	0	313	625	938
to	-938	-625	-313	0	313	625	938	1250
Width	313	313	313	313	313	313	313	313
X-Direction	R188-A 2Ø14/150	R188-A 2Ø14/150	R188-A 2Ø14/150	R188-A 2Ø14/150	R188-A 2Ø14/150	R188-A 2Ø14/150	R188-A 2Ø14/150	R188-A 2Ø14/150
req. As	2.5	2.5	2.5	2.5	2.5	2.5	2.5	2.5
exist.As	3.6	3.7	3.7	3.7	3.7	3.7	3.7	3.6
req.as/m	8.0	8.0	8.0	8.0	8.0	8.0	8.0	8.0
exist.as/m	11.6	11.7	11.7	11.7	11.7	11.7	11.7	11.6
Concrete cover bottom: 25 mm Concrete cover on the side: 25 mm Concrete cover above: 25 mm								

Reinforcement in y-direction bottom (m,cm²)

from	-1500	-1125	-750	-375	0	375	750	1125
to	-1125	-750	-375	0	375	750	1125	1500
Width	375	375	375	375	375	375	375	375
X-Direction	R188-A 3Ø14/125	R188-A 3Ø14/125	R188-A 3Ø14/125	R188-A 3Ø14/125	R188-A 3Ø14/125	R188-A 3Ø14/125	R188-A 3Ø14/125	R188-A 3Ø14/125
req. As	3.1	3.1	3.1	3.1	3.1	3.1	3.1	3.1
exist.As	5.0	5.0	5.0	5.0	5.0	5.0	5.0	5.0
req.as/m	8.2	8.2	8.2	8.2	8.2	8.2	8.2	8.2
exist.as/m	13.4	13.4	13.4	13.4	13.4	13.4	13.4	13.4
Concrete cover bottom: 25 mm Concrete cover on the side: 25 mm Concrete cover above: 25 mm								

Note: The existing reinforcement is not the result of an addition of individual rebars. It is determined by the rebar diameter and the bar spacing per m of the reinforcement area (e.g. the eighth part). The eighth parts at the edges of the foundation are not considered with their full width because of the concrete cover. Therefore, the reinforcement totals in the areas close to the edges may differ even though the reinforcement per m is the same. In the example, there is a difference in the x-direction between the existing reinforcement $A_s = 3.6 \text{ cm}^2$ in the first eighth part and 3.7 cm^2 in the second and 3.7 cm^2 third eighth parts.

The reinforcement is put out in a table. If no type of reinforcement is selected, the existing reinforcement is put out. In the upper table section, the coordinates and the widths of the individual areas are indicated. In the middle part of the table, the selected rebars and fabrics are specified. In the lower part of the table, the required and the existing reinforcement are represented in cm^2 and cm^2/m .

If detailed presetting was selected, a first table gives an overview of the required and the existing reinforcement in each eighth part. In a second table underneath, the used reinforcement objects are listed.

Evaluation of the results

The flexural reinforcement is calculated for the greatest M_x and M_y moments and the required reinforcement referenced to the foundation width is put out.

The decisive flexural moments are calculated in the following expressions:

For centrally loaded foundations, the design moment is determined in accordance with Booklet 631 in the following expression:

$$M = N \cdot b \cdot \frac{1 - \frac{d}{b}}{8}$$

b refers to the foundation width and d to the column width.

With uniaxially loaded foundations, the edge pressure is determined as follows

$$\sigma = \frac{N}{A} \pm \frac{M}{W} \quad \text{or} \quad \sigma = 2 \cdot \frac{N}{3 \cdot b \cdot c}$$

The resulting stresses are used to calculate the moments M_S around the column axes. The design moments result from the expression:

$$M = M_S - N \cdot \frac{d}{8}$$

With biaxially loaded foundations, the foundation is separated in strips and the internal moments are calculated as on uniaxially loaded foundations. The sum of these moments reduced by the portion $N \cdot d/8$ constitutes the design moment.

In general, design is done in the column axis. As this approach is too far on the safe side for stiff sleeves, a section through the centre of the sleeve wall can optionally be selected with sleeve foundations.



A proposal for the selection of the reinforcement is displayed in addition.

With centrally loaded or uniaxially but eccentrically loaded foundations, the distribution of the reinforcement is represented in accordance with Booklet 631, part 2.10. Separate values for the x- and y-direction are put out. If need be, the required upper reinforcement is calculated in addition.


Distribution of M_x in the section I-I

cy/by	0,1	0,2	0,3
Percentages of the total moment	7	8	9
	10	10	11
	14	14	14
	19	18	16
Sum	50	50	50

Illustration: Behaviour and distribution of the flexural moments

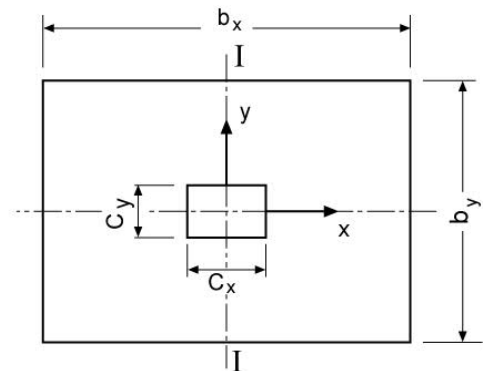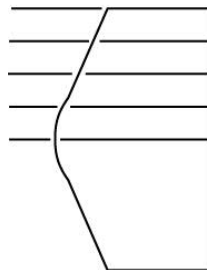

Behaviour of ΣM_x

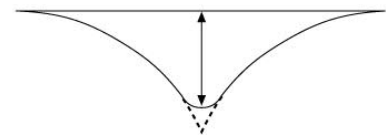

The reinforcement proposal is based on a bar spacing of 15 cm at least. Where squared foundations are concerned, the same bar diameter is selected in both directions.

In accordance with EN 1992-1-1, 9.2.1.1 (1), a minimum reinforcement transverse to the main loading direction is taken into account.

Output: Punching shear resistance verification

The following variants are printed to verify punching:

- only in the verification overview
- simple
- detailed

If $v_{Ed} < v_{Rd,c}$, shear reinforcement is not required.

If $v_{Ed} > v_{Rd,c}$, the reinforcement ratio μ must be increased or shear additions must be installed alternatively. The software puts both values out. For the shear additions, an inclination of 45 degrees is assumed.

If $v_{Ed} > v_{Rd,max}$, the reinforcement ratio μ must be increased so that the condition $v_{Ed} < v_{Rd,max}$ is satisfied at least. The resulting reinforcement is put out.

Reinforcement either consisting of additional longitudinal reinforcement or shear addition must be installed in addition. Both values are put out.

For the sleeve, the required horizontal A_s for the force H_o and the required vertical reinforcement for the vertical component of the compression strut are calculated. With cast-in sleeves, the reinforcement should be arranged laterally next to the opening and anchored thoroughly.

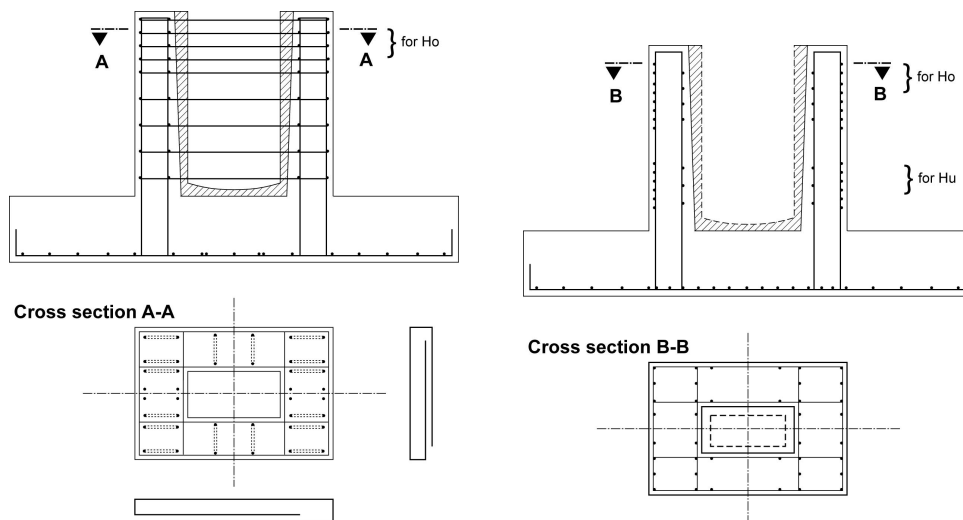


Illustration: Sleeve with rough surface

Illustration: Sleeve with smooth surface