


Timber Truss FWH+

FRILO Software GmbH

www.friilo.com

info@friilo.com

As of 21/06/2018

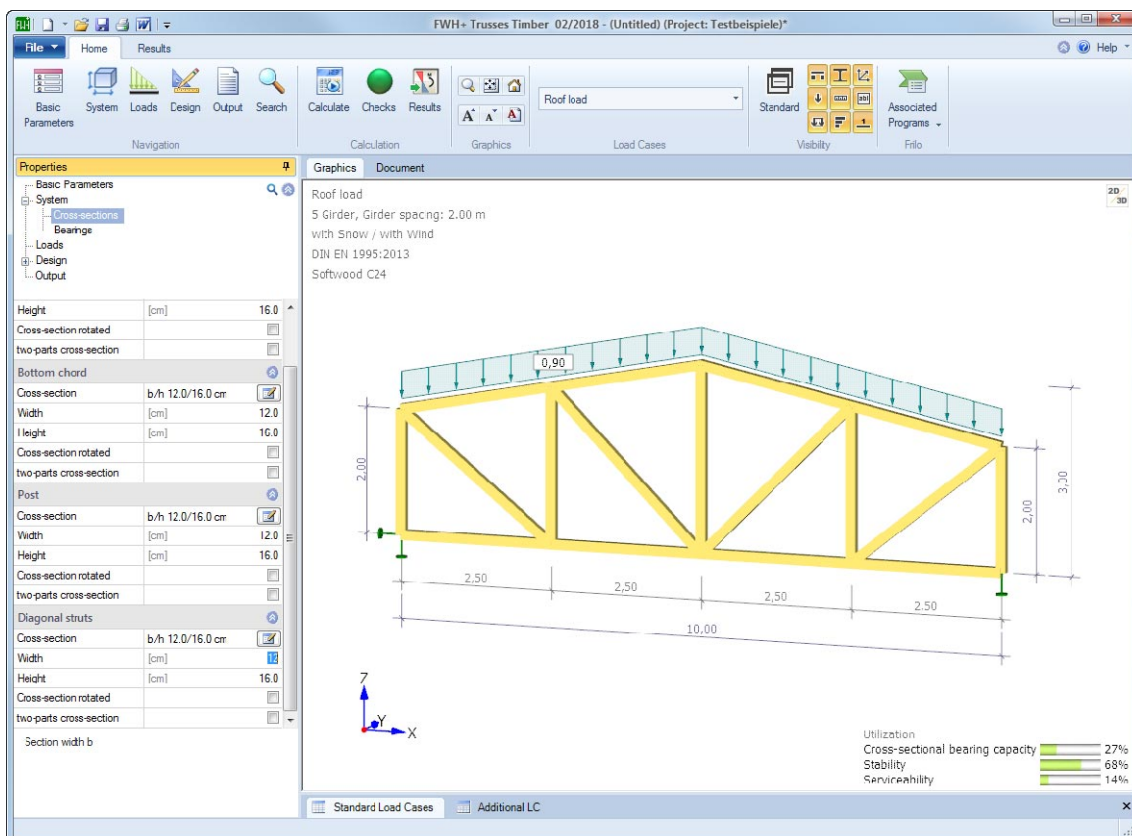

Timber Truss FWH+

Contents

Application options	3
Calculation and design	4
Generation of combinations for timber	5
Timber verifications - EN 1995	6
Stress-resistance/stability verifications	6
Data entry	7
Basic parameters	7
Structural system	9
Cross-sections	10
Supports	11
Loads	12
Building and load parameters	12
Wind and snow	13
Standard load cases and additional load cases	14
Additional load parameters	14
Design	16
Load transfer	16
Results and output	17
Reference literature	19

Further information and descriptions are available in the relevant documentations:

[Wind & Snow Loads-PLUS](#)

Separate description of the wind and snow loads dialog that is part of various applications.

[Basic Operating Instructions - PLUS](#)

General instructions for the manipulation of the user interface of PLUS applications

[FCC](#)

Frilo.Control.Center - the easy-to-use administration module for projects and items

[FDD](#)

Frilo.Document.Designer - document management based on PDF

[FSO](#)

FRILO.Software.Organization: Installation, configuration, network, database

[Output and Printing FDC](#)

[Import and Export](#)

Application options

The software is suitable for the structural calculation and design of timber trusses typical in the construction of portal frames:

- Parallel trusses
- Hip trusses
- Double-hip trusses
- Double-pitch roof trusses
- Single-pitch roof trusses


Continuous chords can be considered as flexurally rigid members.

Deflection is calculated in accordance with the strut-and-tie theory.

Available standards

Timber:

- DIN EN 1995
- BS EN 1995
- ÖNORM EN 1995

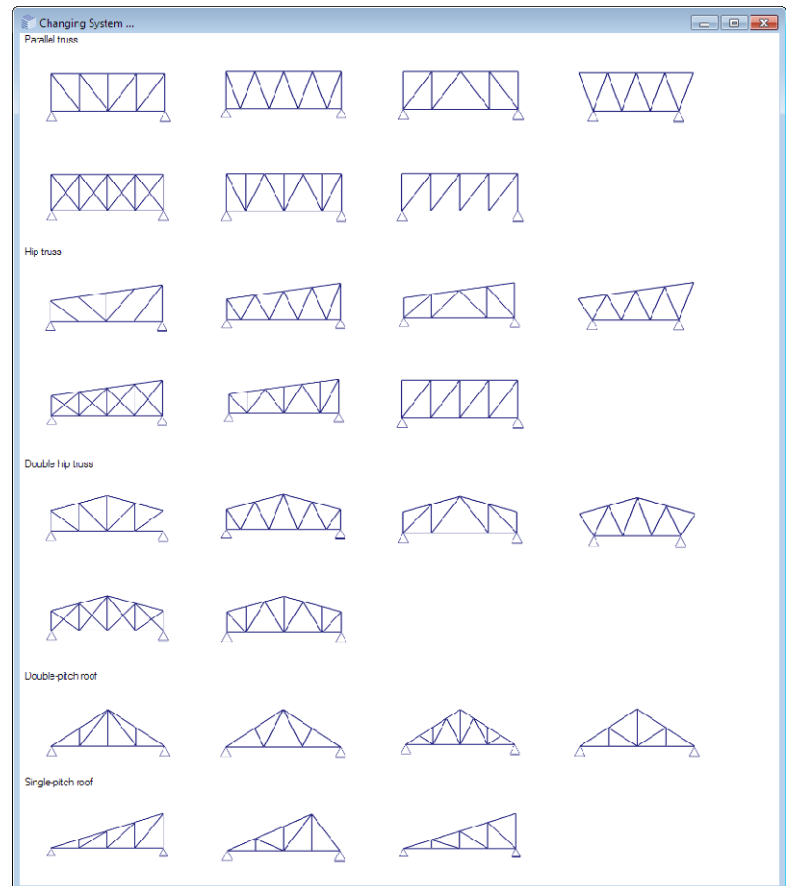

Calculation and design

First, the individual load cases are determined in accordance with the selected truss framing system. The load case combinations are generated subsequently.

See the chapter → [Generation of combinations for timber](#) – EN 1990

The individual member forces for the different load cases are determined in accordance with the strut-and-tie theory.

The maximum internal forces are determined for the following types of members:

- Top chord
- Bottom chord
- Post
- Diagonal strut

Verifications:

Tension and stability verifications.

See the chapter → [Timber verifications](#) – EN 1995

The support reactions are always determined for the simple loads. Optionally, you can put out the loads on the supports separately for the different action groups.

Generation of combinations for timber

The combination rules are based on the probabilistic partial safety concept (as per EN 1990).

For the structural safety verifications, the combinations are generated for the permanent and transient situations. If an accidental action applies, the combinations for the accidental design situation are generated in addition.

For the serviceability verification, only the infrequent and quasi-permanent situations are relevant.

The software generates internally all combinations in accordance with the relevant rules (EN 1990) and performs all corresponding verifications. Only the combinations that turn out to be decisive in the individual verifications are put out, however.

The following [standard load cases](#) are examined by the software:

- permanent loads separately for the top chord and the bottom chord
 - snow on one side, either left or right
 - wind from the left, if a ridge was defined
 - wind from the right, if a ridge was defined
- Wind from the right is considered as the alternative to wind from the left.

Impounding wind pressure values

To take different impounding wind pressure values for different heights above ground level into account, you can specify the height of the bottom chord above the ground level.

In this case, the software applies the different impounding wind pressure values to the different sections in accordance with the standard. See [Building and Load Parameters](#).

Timber verifications - EN 1995

Stress-resistance/stability verifications

The stress-resistance verifications are performed as specified by para. 6.1 and 6.2.

For the shear stress analysis, the full shear force applying to the support is considered.

The stability verification is based on the equivalent bar method specified by para. 6.3.

The system lengths can be influenced through user-defined outer supports.

Data entry

You can enter values and define control parameters in the menu on the left screen section. The effect of a value that you enter is immediately shown in the graphical representation on the right screen section. Before entering any data, you can edit the dimensional units (cm, m ...) via the options File ▶ [Program settings](#).

Wizard

The [Definition wizard](#) is automatically launched when you start the software. You can disable the wizard in the settings menu.

Input options in the three-dimensional GUI

The data entry via the GUI is described in the document "[Basic Operating Instructions - PLUS](#)".

Basic parameters

Materials

Select the desired material: timber or steel.

Standard and safety concept

Depending on the selection of the material (timber/steel) the associated standards are displayed for selection.

Available standards - see application options.

Snow accidental/load factor snow:

Check this option if snow loads shall be included automatically not only in the typical design situations but also as an accidental action. You can either specify a load factor for the accidental snow loads or have it determined automatically by the software (select the corresponding checkbox).

Reduced **k_{mod}** with wind (for timber):

Check this option to use the modification coefficient **k_{mod}** under wind action as an average value for the load duration classes 'short' and 'very short'.


ψ₂:

Check this option to increase the value of the combination coefficient **ψ₂** to 0.5 for snow action in the seismic design situation.

(See introductory decree of the federal states, e.g. Baden-Württemberg)

Wind zone 3 or 4:

Check this option if the building is situated in wind zone 3 or 4. In this case, you need not consider snow as an accompanying action with wind being the leading action.

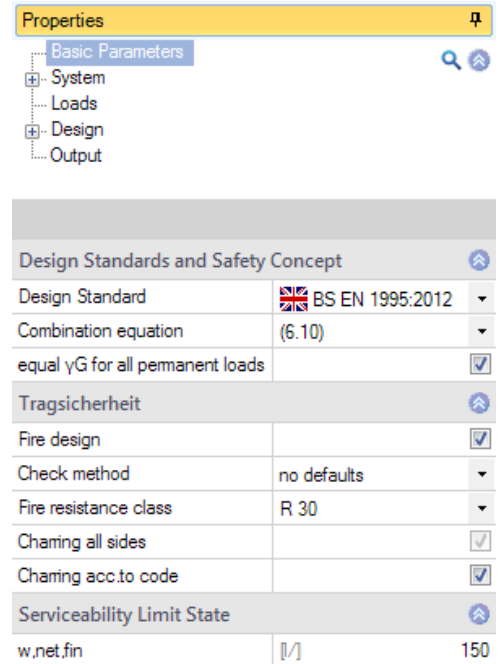

Same γ_G for permanent loads:

Check this option if all permanent loads or load cases shall be included with the same partial safety factor ($\gamma_{G,sup}$ or $\gamma_{G,inf}$). Otherwise, all permanent loads or load cases are combined with each other with $\gamma_{G,sup}$ and $\gamma_{G,inf}$.

- Structural safety
- **Timber**

Fire design:

Check this option to display the data-entry fields for effects of actions by fire and to perform the corresponding verification.

Tragsicherheit	
Fire design	<input checked="" type="checkbox"/>
Check method	no defaults
Fire resistance class	R 30
Charring all sides	<input checked="" type="checkbox"/>
Charring acc.to code	<input checked="" type="checkbox"/>

Verification method:

- No specification the software applies both methods and puts out the decisive result
- Simplified method calculation with reduced cross-sections
- More accurate method calculation with reduced properties

Fire-resistance class

Selection of the desired fire-resistance class or user-defined specification of the charring rate.

Charring on all sides:

Currently you can only select 'charring on all sides.

Charring rate as per standard:

Uncheck this option to specify user-defined charring rates for each side; otherwise, the values of the standard are used.

Serviceability / Deflection

- **Timber**

- w,inst** limit value of the elastic deflection of a single-span truss
- w,net,fin** limit value of the summarized elastic deflection and creep deformation of a single-span truss
- w,fin** limit value of the final deformation of a single-span truss

Structural system


Material

You can define the material in detail in this section.

Softwood, hardwood, glulam.

Material standard: standards for softwood, hardwood, glulam;
 additional parameters, such as the strength class, the use class etc.

Type of truss

Click on the button  to select the truss shape and type.

See also: graphical representation of the [type of truss](#) in the chapter "Application options".








Depending on the selected type of truss, the associated system dimensions are displayed for selection (number of spans, height, length etc.) - additional information is available via the respective tooltip.

Flexurally rigid ridge point


Check this option to define a ridge point that is resistant to deflection.

Bottom chord free from hinges


If this option is checked, support moments are generated in the top/bottom chords above/below the connections.

Properties			
Basic Parameters			
System			
Cross-sections			
Bearings			
Loads			
Design			
Output			
Material			
Timber		Softwood	
Material code		Softwood	
Strength class		Hardwood	
		Glulam	
Service class		2	
Density	γ	[kN/m ³]	6.00
Charact. density	ρ_k	[kg/m ³]	350
Average density	ρ_m	[kg/m ³]	420
System			
Truss system		Double	
Span			4
Length	[m]		10.00
Left height	[m]		2.00
Height	[m]		3.00
Right height	[m]		2.00
Girder spacing	[m]		2.00
Rigid ridge point			<input type="checkbox"/>
Top chord without joint			<input checked="" type="checkbox"/>
Joint free bottom chord			<input checked="" type="checkbox"/>
Remarks			
... System			

Cross-sections

The cross-sections of the chords, posts and diagonal struts can be defined by specifying their dimensions (width/height) or by selecting a cross-section via the  button.


Selection of the cross-section

Activating the  button allows you to extend the dialog and you can optionally display the cross-sectional properties.

Specify the quantity (scantlings or double scantlings), the timber material (solid construction timber (KVH), laminated timber (BSH), Duo/trio, Trada) and the cross-section or create a user-defined cross-section (specify the width, height and a name).


Rotate cross-section check this option to rotate the cross section by 90°.

Two-piece cross-section check this option to define a single-piece or two-piece cross-section.

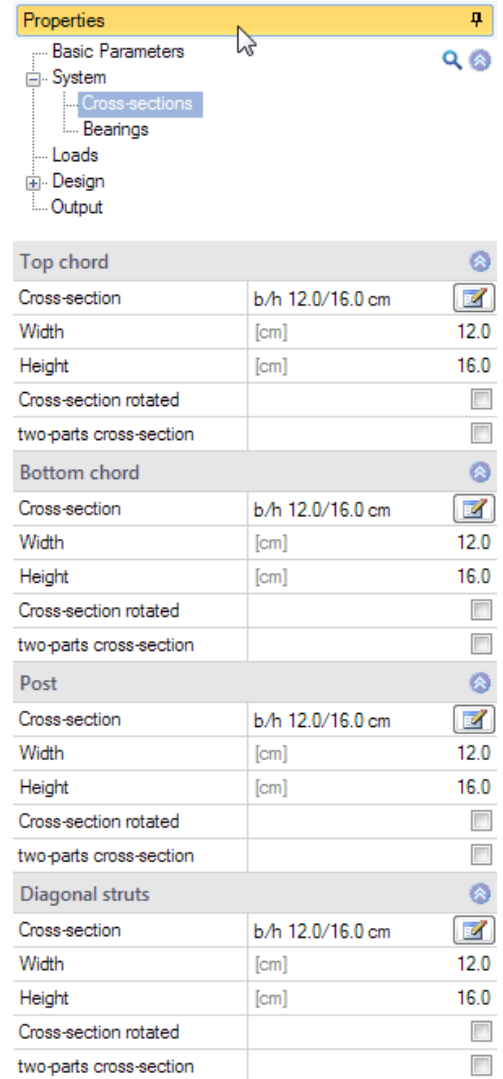

The Properties window shows a tree view with 'Cross-sections' selected. Below, a table lists settings for different truss members:

Top chord		
Cross-section	b/h 12.0/16.0 cm	
Width	[cm]	12.0
Height	[cm]	16.0
Cross-section rotated		<input type="checkbox"/>
two-parts cross-section		<input type="checkbox"/>
Bottom chord		
Cross-section	b/h 12.0/16.0 cm	
Width	[cm]	12.0
Height	[cm]	16.0
Cross-section rotated		<input type="checkbox"/>
two-parts cross-section		<input type="checkbox"/>
Post		
Cross-section	b/h 12.0/16.0 cm	
Width	[cm]	12.0
Height	[cm]	16.0
Cross-section rotated		<input type="checkbox"/>
two-parts cross-section		<input type="checkbox"/>
Diagonal struts		
Cross-section	b/h 12.0/16.0 cm	
Width	[cm]	12.0
Height	[cm]	16.0
Cross-section rotated		<input type="checkbox"/>
two-parts cross-section		<input type="checkbox"/>

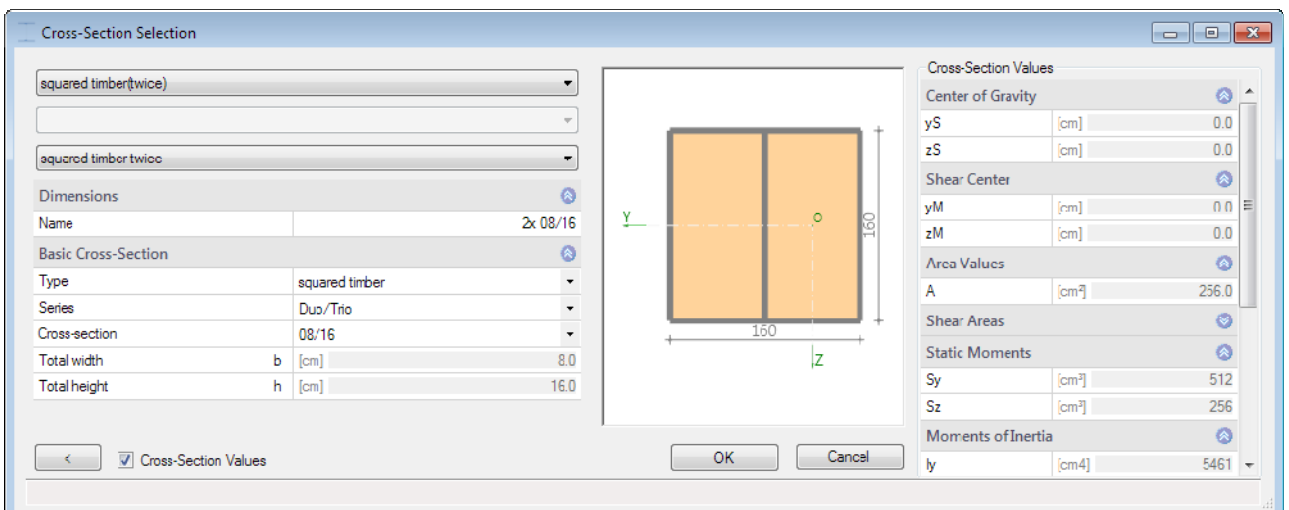

The Cross-Section Selection dialog box contains the following fields and options:

- Material: squared timber(twice)
- Quantity: squared timber twice
- Dimensions:
 - Name: 2x 08/16
 - Type: squared timber
 - Series: Duo/Trio
 - Cross-section: 08/16
 - Total width (b): 8.0 [cm]
 - Total height (h): 16.0 [cm]
- Diagram: A rectangular cross-section with width 160 and height 160, divided into two vertical sections. The center of gravity is marked with a dot 'o'.
- Cross-Section Values:
 - Center of Gravity: yS = 0.0 [cm], zS = 0.0 [cm]
 - Shear Center: yM = 0.0 [cm], zM = 0.0 [cm]
 - Area Values: A = 256.0 [cm²]
 - Shear Areas
 - Static Moments: Sy = 512 [cm³], Sz = 256 [cm³]
 - Moments of Inertia: Iy = 5461 [cm⁴]

Supports

Supports out of plane

Specify the supporting conditions of the different components (top chord, bottom chord, left edge, right edge).

Distance distance to the left or to the bottom, related to the projection plane

Spring value c_y discrete supporting conditions for translation in the y-direction (rigid, 0 = free, >0 = elastically supported)


Application point available options are 'top edge', 'bottom edge' and 'component axis'

Spring value $c_{\phi x}$ discrete supporting conditions for the rotation around the component x-axis

Continuous support (foundation) of the top chord

Translational foundation top edge translational foundation at the top edge of the top chord in the y-direction

Torsional foundation torsional foundation of the top chord about the x-axis

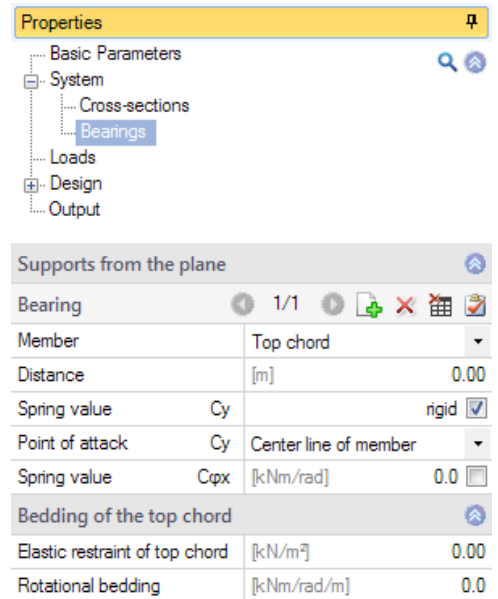


The screenshot shows the 'Properties' panel for 'Supports from the plane'. The 'Bearing' section is active, showing a table of properties for the 'Top chord' member. The 'Bedding of the top chord' section is also visible.

Supports from the plane			
Bearing 1/1			
Member		Top chord	
Distance	[m]		0.00
Spring value	C_y		rigid <input checked="" type="checkbox"/>
Point of attack	C_y	Center line of member	
Spring value	$C_{\phi x}$	[kNm/rad]	0.0 <input type="checkbox"/>
Bedding of the top chord			
Elastic restraint of top chord	[kN/m ²]		0.00
Rotational bedding	[kNm/rad/m]		0.0

Loads

Building and load parameters

Click on the  button to access the dialog of the building and load parameters.

Height above ground level

Specify the height of the bottom chord (system axis) above the top edge of the ground to consider different wind pressure values at different height levels. The wind pressure is calculated for the specified height.

Trusses

Number of trusses in the building (at least three).

Truss spacing

Specify the spacing of the trusses being the width of the load area.

Length of the building

The building length calculated from the number of trusses and their spacing is indicated.

Gable truss


This option allows you to define a gable truss. If you leave the option unchecked (default), the truss is treated as an inner truss. The option influences the selection of the wind area.

Affected width factor

Factor for the load application area on the truss.
Width of load area = factor · truss spacing.


Area with increased wind load

The load application area of the truss is exposed to increased wind load at the gable.

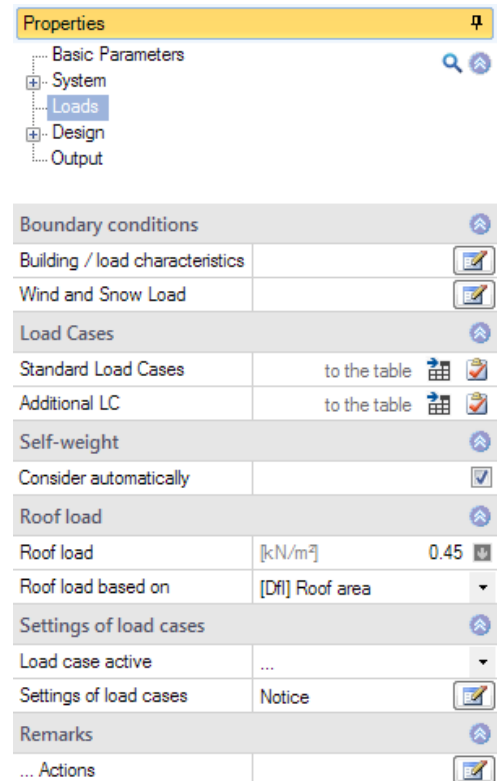

The screenshot shows the 'Properties' dialog box with the 'Loads' section selected. The tree view on the left includes 'Basic Parameters', 'System', 'Loads', 'Design', and 'Output'. The main area displays the following settings:


- Boundary conditions** (expandable)
- Building / load characteristics** (edit icon)
- Wind and Snow Load** (edit icon)
- Load Cases** (expandable)
 - Standard Load Cases: to the table (table icon)
 - Additional LC: to the table (table icon)
- Self-weight** (expandable)
 - Consider automatically:
- Roof load** (expandable)
 - Roof load: [kN/m²] 0.45 (edit icon)
 - Roof load based on: [Df] Roof area (dropdown)
- Settings of load cases** (expandable)
 - Load case active: ... (dropdown)
 - Settings of load cases: Notice (edit icon)
- Remarks** (expandable)
- ... Actions** (edit icon)

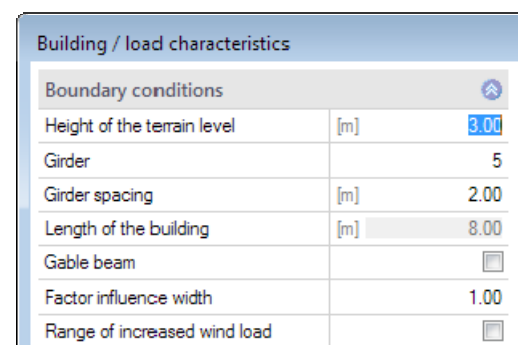


The screenshot shows the 'Building / load characteristics' dialog box with the following parameters:

Building / load characteristics		
Boundary conditions (expandable)		
Height of the terrain level	[m]	3.00 (edit icon)
Girder		5
Girder spacing	[m]	2.00
Length of the building	[m]	8.00
Gable beam		<input type="checkbox"/>
Factor influence width		1.00
Range of increased wind load		<input type="checkbox"/>

Wind and snow

Click on the  button to display the dialog of the border conditions for the calculation of the wind and snow loads. This dialog is described in the documentation Wind & Snow Loads-PLUS.

The different tabs (municipality, wind, snow...) provide access the respective dialogs and data-entry fields.

Town	Wind	Snow	Geometry	Wind loads	Snow Loads
Location 					
Country			Great Britain		
Altitude of terrain		hMSL	[m]	-1000	

Standard load cases and additional load cases

The "Standard load cases" and "Additional load cases" tabs allow you to display the associated load case tables. You can edit and enable or disable individual load cases in the table.

The term "standard load cases" refers to all load cases in compliance with the standards that are generated automatically by the software.

	Description	Action	Alt	Active	Loads
→ 1	Roof load	Permanent loads	0	<input checked="" type="checkbox"/>	Details (1)
2	Wind from left case 1	Wind loads	111	<input checked="" type="checkbox"/>	Details (6)
3	Wind load from left sic	Wind loads	111	<input checked="" type="checkbox"/>	Details (6)
4	Wind load from left sic	Wind loads	111	<input checked="" type="checkbox"/>	Details (4)
5	Wind from right case	Wind loads	111	<input checked="" type="checkbox"/>	Details (6)
6	Wind load from right s	Wind loads	111	<input checked="" type="checkbox"/>	Details (6)
7	Wind from the right wi	Wind loads	111	<input checked="" type="checkbox"/>	Details (4)

In the "Additional load cases" table, you can enter additional user-defined load cases.

Click to the "+" button to add a new row.

Description: You can specify an individual name for the load case.

Action: the appropriate actions can be selected from a list: Permanent loads ... Seismic.

Alt. Alternative group,
Different variable load cases with similar actions can be combined to an alternative load case group by assigning an alternative group number to them. Only the decisive load case of this alternative load case group is invoked in the superposition.

Active you can enable (tick checkbox) or disable (untick checkbox) individual load cases. Disabled load cases are not considered.

Copy loads of load case

The option allows you to copy the loads of a standard load case. You can customize the loads via the "Edit" button.

See also the load values overview LOAD+...


Additional load parameters

Self-weight

Check this option to include the self-weight automatically as a permanent load in the calculation.

Roof load

Enter the permanent load of the roof superstructure.


By clicking on the arrow icon , you can access a load value summary - see the description of the LOAD+ application.

The load of the roof superstructure can optionally be referenced either to the roof area or to the base area.

Load case control

You can control the different load cases by selecting them from the displayed list.

Click on the information button to learn more about this feature.

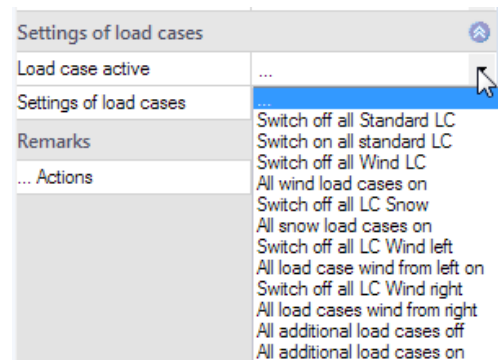

Design

Calculate

Click on the "Calculate" button. After completion of the calculation, the utilizations are represented.


Load transfer

You can transfer the characteristic support reactions to the applications:

- Steel Column STS+
- Timber Column HO1+
- Reinforced Concrete Column B5
- Beam Support ST4
- Reinforced Concrete Corbel B9

Results and output

Via the 'Results' tab (on top), you can display the different result graphs.

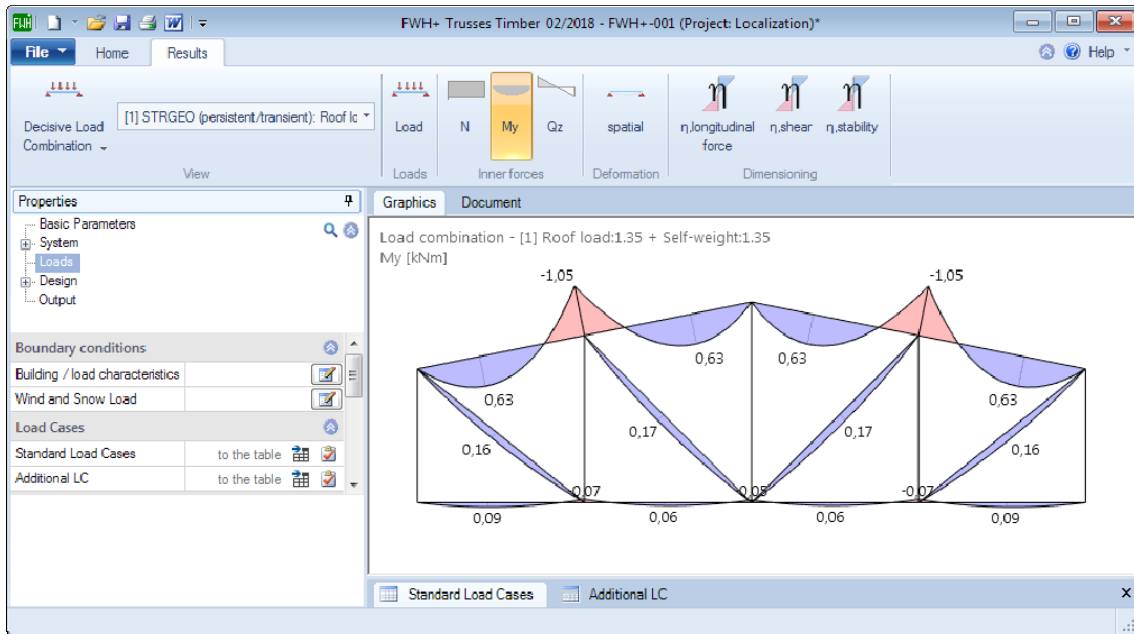

The 'Output' menu item allows you to define the desired scope of data to be put out by checking the corresponding options. For additional contents such as design details, coefficients etc, deselect the 'Brief output' option.

The following results are shown in the form of tables in addition to the system and the load data:

- Maximum values of the vertical and horizontal support reactions (characteristic) and the associated load case combination.
- The maximum deflections of the load-bearing structure as well as the associated load case combination and the utilisation referenced to the specified maximum deflection, if applicable.
- The design of the individual components 'top chord', 'bottom chord', 'posts' and 'diagonal struts' with the most important design values of the required verifications for the decisive load case combinations in each case.

Properties

- Basic Parameters
- System
- Loads
- Design
- Output

General	
Brief output	<input checked="" type="checkbox"/>
Notes	<input type="checkbox"/>
System	
System graphics 2D	<input checked="" type="checkbox"/>
System graphics 3D	<input type="checkbox"/>
Force the scale	<input type="checkbox"/>
Loads	
Actions	<input checked="" type="checkbox"/>
Load Case Graphics	Details (7)
Results	
Support reaction- characteristic per load case	<input checked="" type="checkbox"/>
Result Graphics	Details (6)
Resulting intern forces in table	Details (6)

The output document can be accessed by clicking on the 'Document' tab (above the graphic screen).

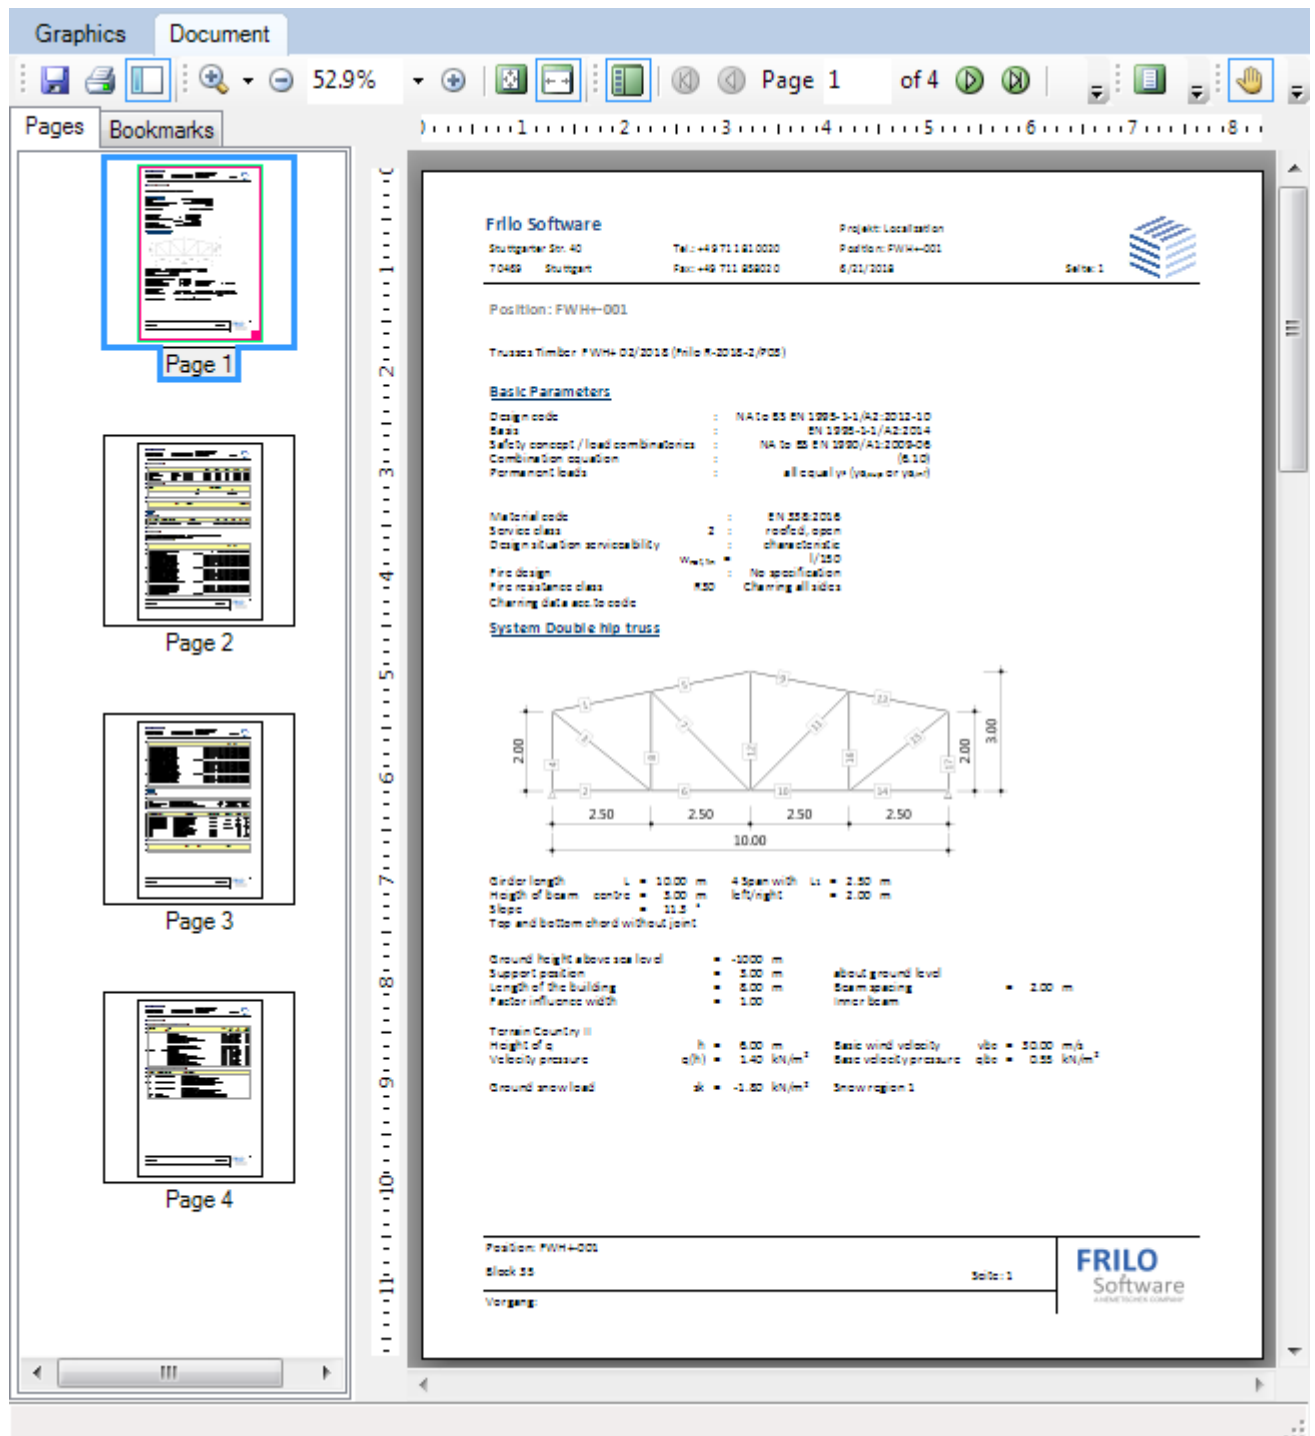


Fig.: The output document can be displayed via the 'Document' tab.

Reference literature

- /1/ EN 1995-1-1:2010, Design of timber structures –Part 1-1: General
- /2/ EN 1990:2010, Basis of structural design
- /3/ EN 1991-1-1:2010, Actions on structures – Part 1-1: General Actions on Structures:
- /4/ EN 1991-1-3:2010, Actions on structures – Part 1-3: General actions - Snow loads
- /5/ EN 1991-1-4:2010, Actions on structures – Part 1-4: General actions - Wind loads
- /6/ EN 1991-1-7:2010, Actions on structures – Part 1-7: General actions - Accidental actions
- /7/ DIN EN 1995-1-1/NA:2013, National Annex to EN 1995-1-1
- /8/ DIN EN 1990/NA:2010, National Annex to EN 1990
- /9/ DIN EN 1991-1-1/NA:2010, National Annex to EN 1991-1-1
- /10/ DIN EN 1991-1-3/NA:2010, National Annex to EN 1991-1-3
- /11/ DIN EN 1991-1-4/NA:2010, National Annex to EN 1991-1-4
- /12/ DIN EN 1991-1-7/NA:2010, National Annex to EN 1991-1-7