

B10 – Reinforced Concrete Half Joint

FRILO Software GmbH

www.friilo.com

info@friilo.com

Version: 1/2018

As of 13/12/2017

material
C40/E0
B500A

concrete cover
c= 3.0 cm

beam
b0 = 25.0 cm
h0 = 60.0 cm
bm = 0.0 cm
hb = 0.0 cm

console
Hk = 25.0 cm
k = 20.0 cm
Phi = 0

support
F,ed = 72.50 kN
e1 = 8.0 cm
H,ed = 25.00 kN
bp = 25.0 cm
F1,ed = 0.00 kN
lp = 10.0 cm

reinforcement
ratio of incl. reinf. = 0 % mi = 40.0 ° angle
dist. up. reinf. layer top do = 4.3 cm
bottom du = 4.4 cm
susp. stirup-layer preset u1 = 0.0 cm

default diameter
suspension stir. du_V = 8 mm 2 · set
inclined stir. du_S = 20 mm 2 · set
horizontal stir. du_H = 14 mm 2 · set
console stir. du_K = 0 mm

Result : **system calculated.**

13.12.2017 08:53

B10 – Reinforced Concrete Half Joint

Contents

Application options	4
Basis of calculation	6
Definition of the structural system	9
Material selection	9
Concrete cover	9
Beams	9
Half joint	9
Supports	9
Reinforcement	10
Verification options	11
Output	12
Application-specific icons	12
Reference literature	13

Further information and descriptions are available in the relevant documentations:

[Durability - Creep Coefficient and Shrinkage Strain.pdf](#)"

FDC – Basic Operating Instructions	General instructions for the manipulation of the user interface
FDC – Menu items	General description of the typical menu items of Frilo software applications
FDC – Output and printing	Output and printing
FDC - Import and export	Interfaces to other applications (ASCII, RTF, DXF ...)
FCC	Frilo.Control.Center - the easy-to-use administration module for projects and items
FDD	Frilo.Document.Designer - document management based on PDF
Frilo.System.Next	Installation, configuration, network, database

Application options


The B10 software application allows you to calculate dapped beam ends.

Available standards:

- DIN EN 1992-1-1:2012 + 2013 + 2015
- ÖNORM EN 1992-1-1:2011
- BS EN 1992-1-1:2004 + 2009 + 2015
- EN 1992-1-1
- NTC EN 1992-1-1:2008


DIN 1045 and DIN 1045-1 are still optionally available.

When using precast beams in reinforced concrete frame structures, dapped beam ends are often required in the bearing area to keep the floor structure as thin as possible. Because anchorage of the diagonal tie Zs is difficult due to the geometrical conditions in strut-and-tie models with an inclined reinforcement portion of 100 %, a combined strut-and-tie model comprising perpendicular and inclined suspension reinforcement (see illustration) is selected under normal conditions.

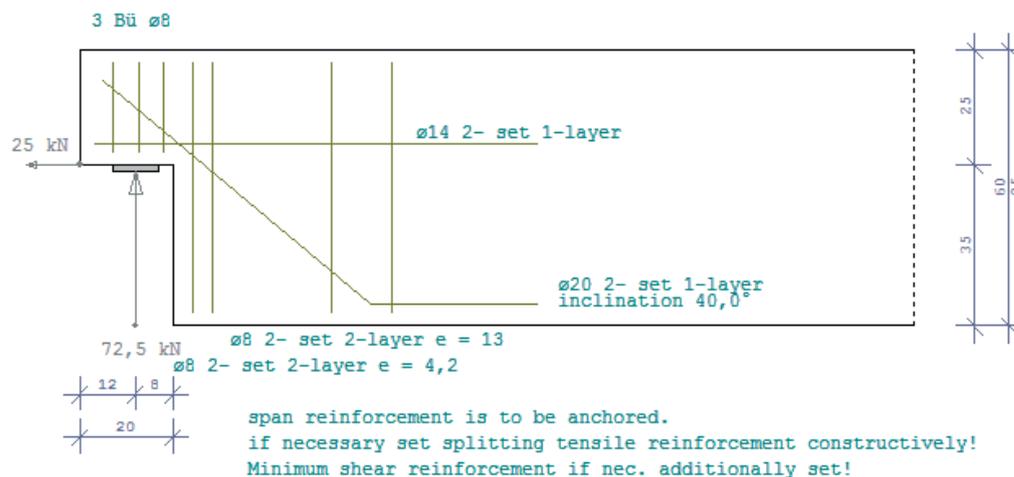



- Calculation optionally in accordance with DAfStb¹ Booklet 399
- Strut-and-tie model combined of perpendicular and diagonal suspension reinforcement
- Freely selectable portion of inclined reinforcement
- Design of an additional load (transfer immediately in the support)
- FE-modelling to check the load-bearing behaviour
- Representation of the main stress determined in the FE modelling
- Calculation of the reinforcement with representation of the reinforcement layout

¹ German Committee for Reinforced Concrete

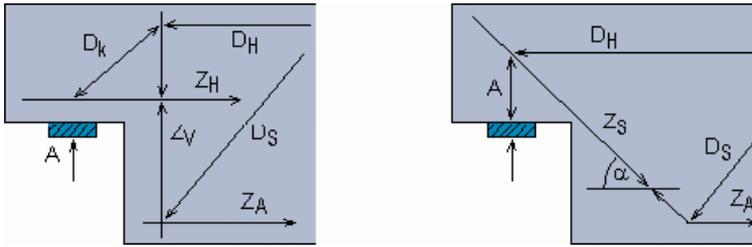

Load transfer from DLT to B10

The load transfer interface allows you to transfer loads from the Continuous Beam application DLT to B10.

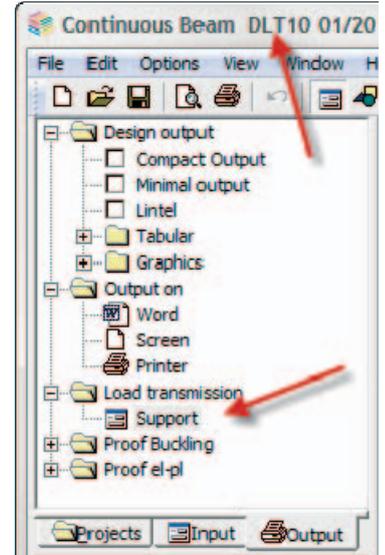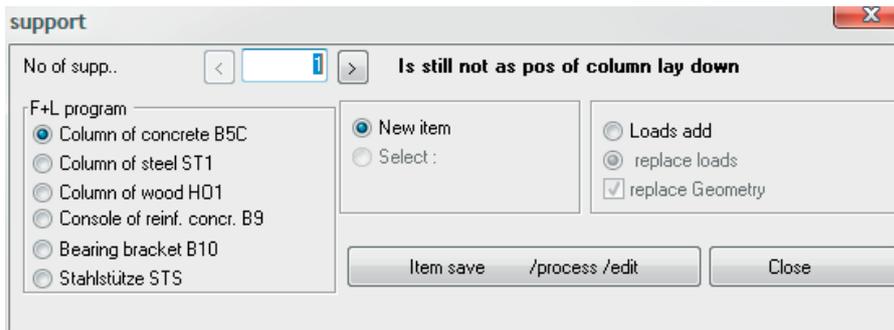

Basis of calculation

Calculation in accordance with EN 1992-1-1

The calculation is based on a strut-and-tie model combined of perpendicular and inclined suspension reinforcement in accordance with DAfStb Booklet 399.

The design is performed with the rebar diameters specified by the user. The equilibrium in the strut-and-tie model is determined by iterative addition of the required stirrups and the recalculation of the centres of gravity of the reinforcement.

Strut-and-tie model consisting of inclined suspension reinforcement

The inclined model is always used in combination with the model of perpendicular suspension reinforcement to prevent shearing of the half joint along the inclined bars. This model is more suitable for mapping the actual load-bearing behaviour of higher beam corbels.

The software allows you to define a load-bearing portion of inclined reinforcement of 70 %.

Tensile force in the inclined reinforcement:

$$F_{ZS} = (F_{ed} - F_{1ed}) \cdot \text{inclined reinforcement portion}$$

Strut-and-tie model consisting of perpendicular suspension reinforcement

While the model of inclined suspension reinforcement results directly from the support geometry, the geometry of the model of perpendicular reinforcement is determined through the dimensioning of the nodes 1 and 2 of the inclined strut (D1), see illustration 3.

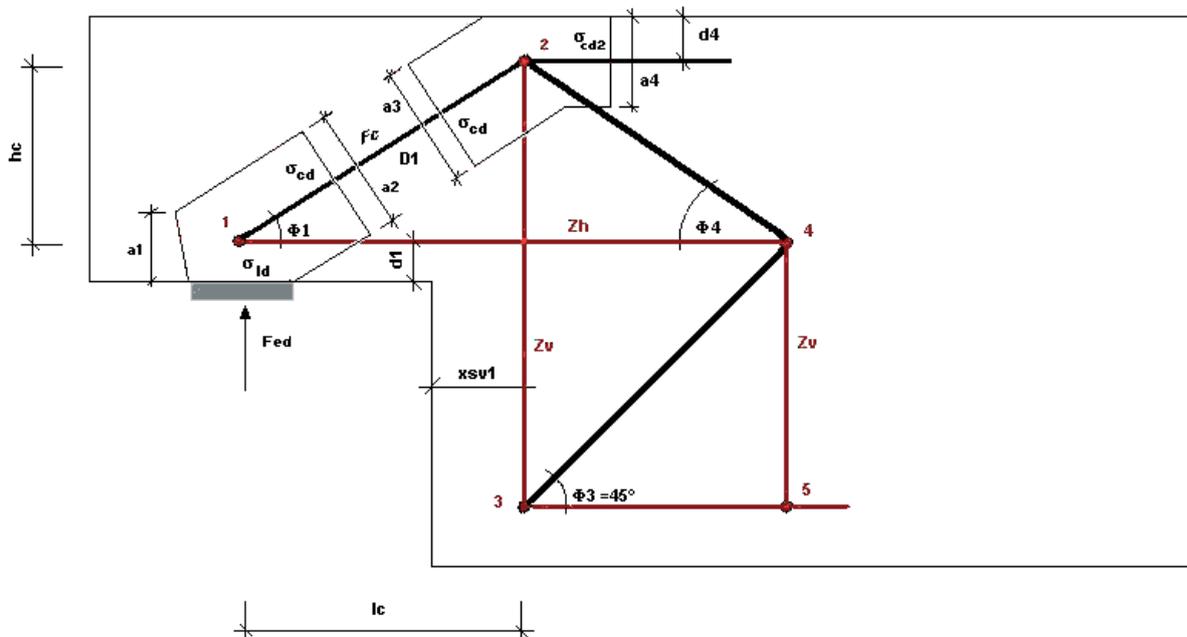


Illustration 3

First, the geometry of the strut-and-tie model is determined in accordance with illustration 3.

It is assumed that the stress limit $\sigma_{Rdmax} = k_2 \cdot v' \cdot f_{cd}$ in node 2 (stress σ_{cd2} depends on a_4) is complied with; k_2 and v' are assumed in accordance with the selected National Annex (NA).

- for Germany: $k_2 = 0.75, v' = 1.1 - f_{ck} / 500 \leq 1.0$

- for Austria: $k_2 = 0.9, v' = 1.0 - f_{ck} / 250 \leq 1.0$

The exact compression strut position with the dimensions of the nodes 1 and 2 is determined in the above expressions and the given border conditions such as the concrete cover and the centre of gravity of the suspension reinforcement and the horizontal reinforcement.

By defining unfavourable half joint dimensions and/or if a high number of reinforcement layers is required, an inclination of the compression strut below 30° can result. The software aborts the calculation in this case because a design based on such a strut-and-tie model is not permitted.

Tensile force in the vertical suspension reinforcement:

$$F_{ZV} = (F_{ed} - F_{1ed}) \cdot (1 - \text{inclined reinforcement portion})$$

Compression strut inclination:

$$\Phi_1 = \text{atn}\left(\frac{hc}{lc}\right)$$

$$\sigma_{cd2} = \frac{F_{ZH}}{(b_k \cdot a_4)} \quad b_k = \text{half - joint width}; F_{ZH} = F_{ZV} \cdot \frac{l_c}{h_c}$$

Compressive strut force:

$$F_c = F_{ZV} / \sin(\Phi_1)$$

Horizontal forces due to the compressive strut geometry that are to be anchored:

$$F_{ZH} = (F_{ZV} + F_{1ed}) \cdot (lc / hc) + H_{ed}$$

Verification of the load-bearing capacity of the compressive concrete strut:

Compliance with the following condition must be verified

$$F_{ed} \leq V_{rd_max}$$

with $V_{Rd,max}$ as per EN 1992-1-1 eq. (6.9) and consideration of the applicable NA.

Verification of node 1 (bearing stress):

The verification of the compressive stress underneath the load plate is based on EN 1992-1-1:

With the following conditions underneath the load plate:

$$\sigma_{ld} = \frac{F_{ed}}{l_p \cdot b_p} \leq \sigma_{rd} = k_2 \cdot v' \cdot f_{cd} \quad k_2 \text{ and } v' \text{ in accordance with the applicable National Annex (NA)}$$

- for Germany: $k_2 = 0.75, v' = 1.1 - f_{ck} / 500 \leq 1.0$

- for Austria: $k_2 = 0.9, v' = 1.0 - f_{ck} / 250$

and in node 1:

$$a1(1) = 2 \cdot d_1$$

Definition of the structural system

First, select the applicable [standard](#) in the main menu.

Material selection

The available materials depend on the selected standard.

Concrete cover

Define the concrete cover nom.c in this data-entry field.

Beams

Specification of the beam dimensions.

- b0** web width
- h0** beam height
- bm** plate width
- hp** plate thickness

Half joint


Specification of the half joint dimensions.

- hk** height of the half joint
- lk** length of the half joint

Supports

- F,ed** resulting design value of the total vertical support reaction
- H,ed** resulting design value of the horizontal support reaction
Note: In order to take into account any possible constraining forces in the horizontal direction it is recommended: $H, ed \geq 20\%$ of F, ed .
- e1** distance from support axis to front edge of beam
- F1,ed** resulting design value of close-to-support load that is not up anchored
- bp** width of the load-transferring plate (direction as with b0)
- lp** length of the load-transferring plate

support		
F,ed=	<input type="text" value="72,50"/> kN	e1 = <input type="text" value="8,0"/> cm
H,ed=	<input type="text" value="25,00"/> kN	load introduction: bp= <input type="text" value="25,0"/> cm
F1,ed=	<input type="text" value="0,00"/> kN	lp= <input type="text" value="10,0"/> cm

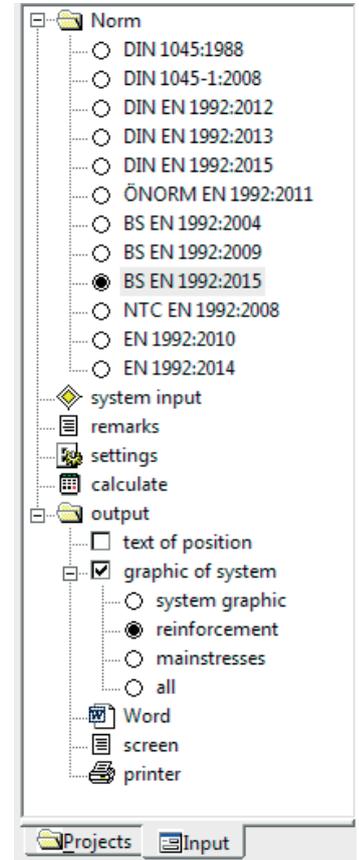

Reinforcement

Inclined

reinforcem. portion of inclined bars in the suspension reinforcement (70 % maximum)

Preferable diameter

du_V suspension stirrups, diameter of the vertical suspension reinforcement

du_S diameter of the inclined suspension reinforcement, requires the specification of the number of shear faces of a stirrup layer (see du_H)

du_S diameter of the horizontal tensile stirrups, requires the specification of the number of shear faces of a stirrup layer.

The maximum number of shear faces of a layer with stirrups laid next to each other is verified under the assumption of a bending roll diameter of $7 \cdot du$ (or $4 \cdot du$ when $du < 20$) in accordance with DAfStb Booklet 400 and is displayed in the status line.

The maximum number of shear faces that can be specified in the data-entry field is determined by the minimum rebar spacing defined in the code ($a_{min} \geq ds$ and $a_{min} \geq 20 \text{ mm}$).

du_K stirrup diameter in the half joint

reinforcement		default diameter	
ratio of incl. reinf.	= <input type="text" value="20"/> % mit <input type="text" value="40,0"/> ° angle	suspension stir.	du_V = <input type="text" value="8"/> mm <input type="text" value="2"/> - set
dist. up. reinf. layer	top do = <input type="text" value="5,0"/> cm	inclined stir.	du_S = <input type="text" value="20"/> mm <input type="text" value="2"/> - set
	bottom du = <input type="text" value="5,0"/> cm	horizontal stir.	du_H = <input type="text" value="14"/> mm <input type="text" value="2"/> - set
susp. stirrup-layer	preselect d1 = <input type="text" value="0,0"/> cm	console stir.	du_K = <input type="text" value="8"/> mm
Result :	system calculated.		

Functions of the buttons in the graphical user interface




Pressing this button displays the reinforcement in the GUI.



Pressing this button displays the inner strut-and-tie model in addition to the reinforcement in the GUI.





Pressing this button hides or displays the reinforcement in the inner strut-and-tie model.

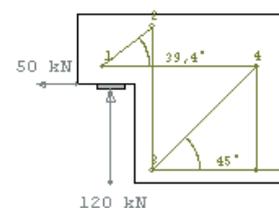

Verification options

► Main menu ► Settings.

Any changes of the settings in this dialog have an immediate effect on the defined half joint and the values set in the system definition section. When you set up a new item, the software goes back to the default settings, however. The button "By default" allows you to save your settings as defaults.

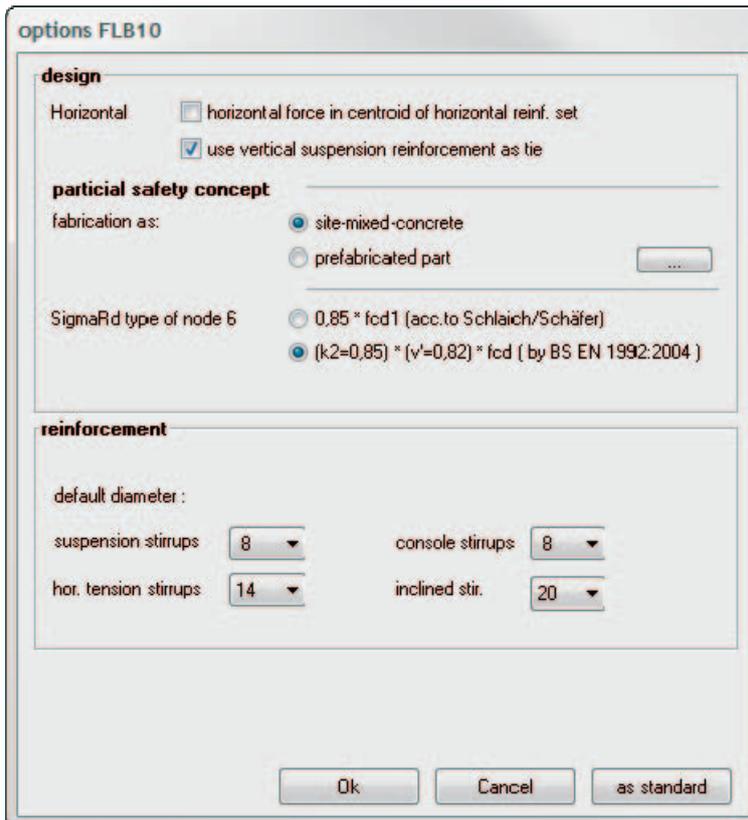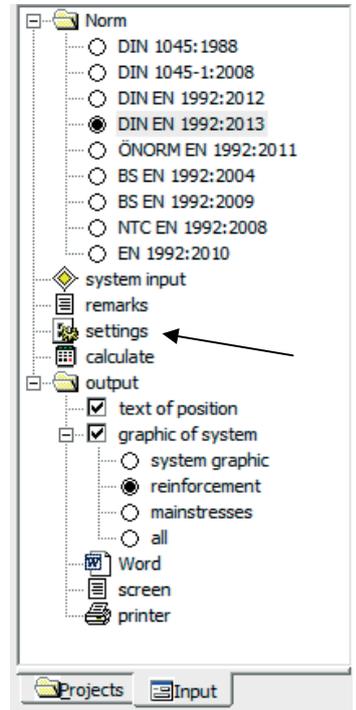Horizontal force

The horizontal force acts normally on the support (bottom edge of half joint). You can optionally transfer it directly to the horizontal stirrups.

According to the enhanced strut-and-tie model described in the Concrete Yearbook 2007 (Betonkalender 2007, Teil 2, Seite 342, Modell C), the horizontal force is borne by the triangle formed by the ideal strut inclination and the vertical stirrups (see the paragraph "[Model for the back anchorage of the horizontal force](#)" in the Basis of calculation section).

Fabricated as

Available options are "Cast-in-place concrete" or "Precast component". The selection has an influence on the determination of the material coefficients γ_c and γ_s .

SigmaRd...

The limit stress for the design of the compression strut underneath the load plate in the node type 6 of the strut-and-tie model can optionally be assumed with $0.85 \cdot f_{cd1}$ in accordance with Schlaich/Schäfer or $k_2 \cdot v' \cdot f_{cd}$ as per EN 1992-1 and the values specified in the applicable NA (see above).

Preferable diameter

Specification of default values for the preferable diameters of the different stirrup types.

Output

Output of the system data, results and graphics on the screen or printer.

The Output item in the Main menu allows you to start the output on a printer or the screen.

Word output to MS-Word, if this software is installed on your computer.

Screen displays the values in a text window on the screen

Printer starts the output on the printer

▶ File ▶ Print preview displays a print preview.

Output profile

The individual output options allow you to customise the scope and contents of the data to be put out. Only the activated options are considered in the output scope.


Item text texts that you entered in the "Comments" section are put out at the beginning of the output document.

Graphic of system

Main stress representation of the structural system with the main stresses

Reinforcement representation of the structural system with the reinforcement

All representation of the structural system with the main stresses and the reinforcement

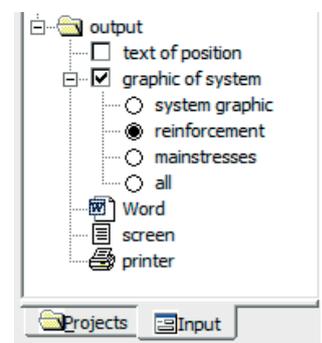

Application-specific icons



The buttons allow you to select the output on the screen

- system graph
- main stress chart
- reinforcement
- combination of main stresses and reinforcement
- internal strut-and-tie model
- internal strut-and-tie model with or without reinforcement

Reference literature

- /1/ EN 1992-1-1 including the relevant National Annexes
- /2/ Booklet 599 of the German Committee for Reinforced Concrete DAfStb
- /3/ Booklet 600 of the German Committee for Reinforced Concrete DAfStb
- /4/ Stahlbetonbau aktuell 2013, Stabwerksmodelle
- /5/ Booklet 399 of the German Committee for Reinforced Concrete DAfStb
- /6/ Booklet 425 of the German Committee for Reinforced Concrete DAfStb
- /7/ LEONHARDT, Vorlesungen über den Massivbau Teil 3
- /8/ Concrete Yearbook: Betonkalender 2001, Part 2, Konstruieren im Stahlbetonbau (SCHLAICH, SCHÄFER)
- /9/ Concrete Yearbook: Betonkalender 2002, Part 1, Grundlagen der Bemessung nach DIN 1045-1 in Beispielen (LITZNER)
- /10/ Concrete Yearbook: Betonkalender 2007 Teil 2, Konstruktion und Bemessung von Details nach DIN 1045 (FINGERLOOS / STENZEL)